



说明书材质要求: 105g 有光铜版纸	说明书成品尺寸: 105x143mm
第一: 专色+CMYK油墨要求: 1.K色油墨: 洒联黑墨	第二: 特别注意: 暂无
	 Black (单色印刷)
折叠方式: 风琴折 (20P 以下用风琴折)	备注:

特别注意: 此页内容不印刷

风琴折 + 对折 页面顺序

16P 页面顺序

9	10	11	封面
12	13	14	封底

1	2	3	4
5	6	7	8

20P 页面顺序


11	12	13	14	封面
15	16	17	18	封底

1	2	3	4	5
6	7	8	9	10

更改记录	1. WADFOW 互转				
	0623.J01	2023.6.28	LZH		
	版本号	日期	设计师		

Jadever

HYDRAULIC FLOOR JACK

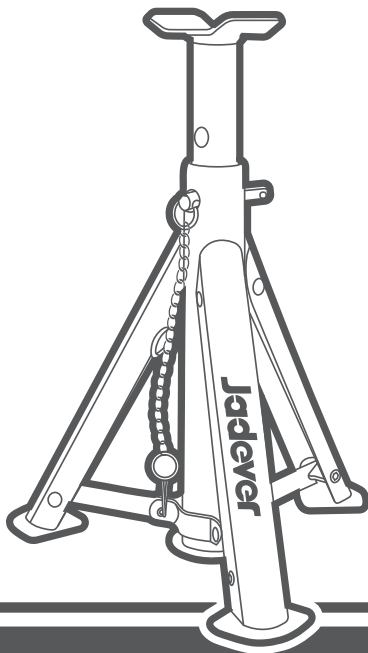

SCAN FOR VIDEO


JDHJ3502,JDHJ3503

**PRODUCT
MANUAL**

SAFETY INSTRUCTIONS

1. Study, understand, and follow all instructions before operating this device.
2. Do not exceed rated capacity.
3. Use only on hard, level surfaces, with less than 3 degrees of slope.
4. Center load on saddle.
5. Use as a matched pair only.
6. Stands are not to be used to simultaneously support both ends of a vehicle.
7. No alterations shall be made to this product.
8. Support only on areas of the vehicle as specified by the vehicle manufacturer.
9. Only attachments and/or adapters supplied by the manufacturer shall be used.
10. Use wheel chocks or other blocking device on opposing wheels before using jack stands.
11. Do not use jack stands for any use other than the manufacturer specified usage.
12. Do not use if damaged in any way.
13. NEVER use jack stands on a lawn mower or lawn tractor.
14. Do not move or dolly the vehicle while on support stands.
15. Do not rock the vehicle while working on or around equipment.
16. The following are not recommended for supporting on this equipment: Foundations, Homes, Mobile Homes, Trailers, RV's, Campers, nor Fifth Wheels, etc...
17. Failure to heed these markings may result in personal injury and/or property damage.

SPECIFICATIONS

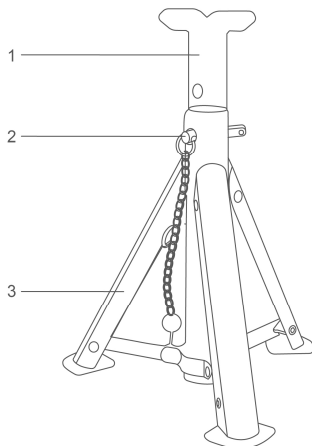

1. Top pillar assembly
2. Pin roll assembly
3. Base assembly

Technical specifications

Model No.	JDHJ3502	JDHJ3503
Nominal load	Max.2Ton(2Pcs/Pair)	Max.3Ton(2Pcs/Pair)
Lifting height	Min. 278 mm to Max.366 mm	Min. 286 mm to Max.401 mm


OPERATION

- Put the jack stands on hard level ground.
- Adjust height by pulling up on ratchet.
- Place load on the center of saddle for safety it is strongly recommended that lifting means not be removed while jack stands are supporting the vehicle.
- Secure ratchet by turning stopper to hold load. Make sure stopper has been securely inserted.
- Release stopper and let ratchet glide down to the lowest position when storing the jack stand.
- Read the instruction manual completely and keep it for further information purpose.
- Secure lifted loads with jack stands immediately.
- If the operator is not fluent in English, the product and safety instructions shall be read to and discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends their contents.
- Inspect before each use **DO NOT USE IF BENT BROKEN OR CRACKED COMPONENT ARE NOTED.** prevent corrosion. Clean as needed and wipe with an oily cloth and keep in dry area when not in use.

Visual inspection shall be performed before each use of the stand by checking abnormal condition, such as cracked welds, leaks and damaged, loose or missing parts if stand is believed to have been subjected to abnormal load or shock inspection shall be made by authorized repair facility.

Equipment that appears damaged or worn or operates abnormally shall be removed from service until repair. Repair should be made by authorized repair facility.

Annual inspection of the stand is recommended and should be made by the manufacturer's or supplier's authorized repair facility to ensure that you stand is optimum conditions and that the stand has correct decals and safety labels specified by the manufacturer.

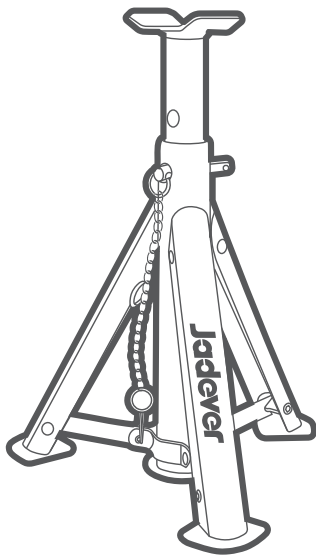

   **Jadevermall**
www.jadevermall.com
KEYWAY TECHNOLOGY (NANTONG) CO., LTD
MADE IN CHINA 0623.J01