



|                                |                                                                                               |
|--------------------------------|-----------------------------------------------------------------------------------------------|
| 说明书材质要求： <b>105g 有光铜版纸</b>     | 说明书成品尺寸： <b>105x143mm</b>                                                                     |
| 第一：专色+CMYK油墨要求：<br>1.K色油墨：洒联黑墨 | 第二：特别注意：<br>暂无                                                                                |
|                                |  Black（单色印刷） |
| 折叠方式： <b>风琴折</b>               | 备注：                                                                                           |

**特别注意： 此页内容不印刷**

风琴折 + 对折 页面顺序

16P 页面顺序

|    |    |    |    |
|----|----|----|----|
| 9  | 10 | 11 | 封面 |
| 12 | 13 | 14 | 封底 |

|   |   |   |   |
|---|---|---|---|
| 1 | 2 | 3 | 4 |
| 5 | 6 | 7 | 8 |

20P 页面顺序

 
|    |    |    |    |    |
|----|----|----|----|----|
| 11 | 12 | 13 | 14 | 封面 |
| 15 | 16 | 17 | 18 | 封底 |

|   |   |   |   |    |
|---|---|---|---|----|
| 1 | 2 | 3 | 4 | 5  |
| 6 | 7 | 8 | 9 | 10 |

|      |            |            |     |          |            |     |                  |            |        |
|------|------------|------------|-----|----------|------------|-----|------------------|------------|--------|
| 更改记录 | 1.wadflow转 |            |     | 1.衍生款    |            |     | 1.加安规条款EN60335-1 |            |        |
|      | 0923.J01   | 2023.09.02 | YJJ | 0624.J02 | 2024.06.21 | YJJ | 0125.J03         | 2024.01.03 | Athena |
|      | 版本号        | 日期         | 设计师 | 版本号      | 日期         | 设计师 | 版本号              | 日期         | 设计师    |

# **Jadever**

## **VACUUM CLEANER**

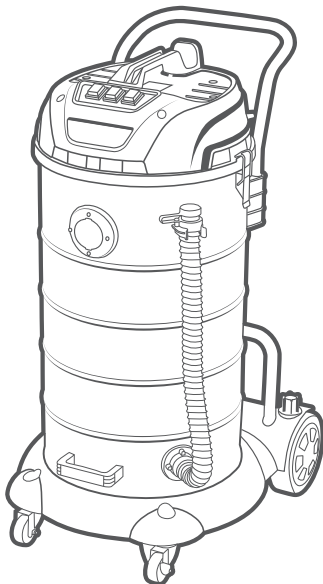

JDVR5A90 JDVR5A90xy  
x(blank,1,2,3,4,5,6,7,8,9,E,S,A,M);  
y(blank,-1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

**PRODUCT  
MANUAL**

**GENERAL SAFETY WARNINGS**

**⚠ WARNING!** Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

**Save all warnings and instructions for future reference.**

*The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.*

**Work area safety**

- a) **Keep work area clean and well lit. Cluttered and dark areas invite accidents.**
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.**
- c) **Keep children and bystanders. Distractions can control.**

**Electrical safety**

- a) **Power tool plugs must match the outlet. Never modify the plug in any way.** *Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges, and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling, or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.**
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

## Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool.** *Do not use a power tool while you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.*
- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach.** *Always keep proper footing and balance. This enables better control of the power tool in unexpected situations.*
- f) **Dress properly.** *Do not wear loose clothing or jewellery. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*

## Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*

- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tools operation.** *If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.*
- f) **Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.**
- g) **Use the power tool, accessories, and tool bits etc.** *In accordance with these instructions, considering the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.*
- h) **Have your power tool serviced by a qualified repair person using only identical.** *This will ensure that the safety of the power tool is maintained.*

### **Service**

- a) **Have your power tool serviced by a qualified repair person using only identical.** *This will ensure that the safety of the power tool is maintained.*

## THE SYMBOLS IN INSTRUCTION MANUAL

|                                                                                   |                                                                                                                                                                                       |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Double insulated for additional protection.                                                                                                                                           |
|  | Read the instruction manual before using.                                                                                                                                             |
|  | Safety alert.<br>Please only use the accessories supported by the manufacturer.                                                                                                       |
|  | Wear safety glasses, hearing protection and dust mask.                                                                                                                                |
|  | Waste electrical products should not be disposed of with household waste.<br>Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. |

## ADDITIONAL SAFETY WARNING

### Vacuum cleaner safety warnings

- a) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- b) Do not use outdoors.
- c) Do not leave vacuum cleaner when plugged in. Turn off the switch and unplug the electrical cord when not in use and before servicing.
- d) Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- e) Use only as described in this manual. Use only manufacturers 'recommended attachments.
- f) Do not use with damaged cord or plug.
- g) Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- h) Do not use extension cords or outlets with inadequate current carrying capacity.
- i) Turn off all controls before unplugging.
- j) Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- k) Do not handle plug or vacuum cleaner with wet hands or operate without shoes.
- l) Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce airflow.
- m) This vacuum cleaner creates suction and contains a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- n) Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- o) Do not use without dust cup or filter in place.
- p) Use extra care when cleaning on strings.
- q) Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- r) Store your cleaner indoors in a cool, dry area.

- s) Ensure you turn the unit off at the very minimum every 15 minutes (for 1 minute) to let the motor cool down - failure to do so may cause motor failure.
- t) Do not use this unit for more than 4 hours (including rest breaks) on any given day.

 
## **INTENDED USE**

The wet and dry vacuum cleaner is designed for wet and dry vacuuming using the appropriate filter. The appliance is not suitable for the vacuuming of combustible, explosive or harmful substances.

The machine is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

## SPECIFICATIONS

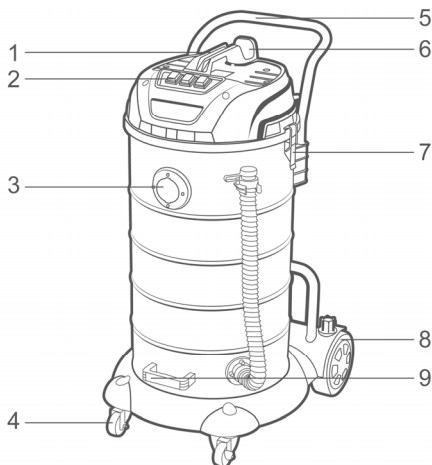

### Components

- |                    |              |
|--------------------|--------------|
| 1. Handle          | 6. Hook      |
| 2. Switch button   | 7. Locker    |
| 3. Suction         | 8. Big wheel |
| 4. Universal wheel | 9. Drain     |
| 5. Metal handle    |              |

## Technical specifications

| Model No.       | JDVR5A90 JDVR5A90xy             |
|-----------------|---------------------------------|
| Voltage         | 220V-240V~50/60Hz               |
| Input power     | 1200W*3                         |
| Dust capacity   | 90L                             |
| Air flow        | $\geq 3.3\text{m}^3/\text{min}$ |
| Vacuum pressure | $21 \pm 1.5\text{kPa}$          |

 
 
 
 
 
 
 
 
**Model No. NOTE:** x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M); y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

- Due to our continuing program of research and development, the specifications herein are subject to change without notice.

## Accessories

1. Wet & dry brush 1pcs
2. Hose set 1pcs
3. Tubes 1pcs
4. Crevice nozzle 1pcs
5. Round nozzle 1pcs

# OPERATION PICTURE

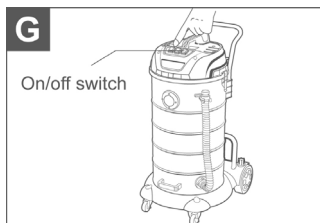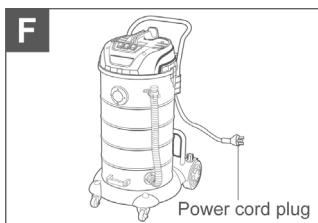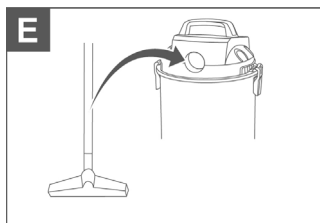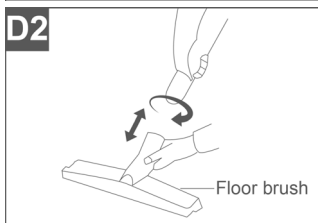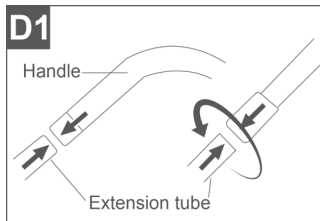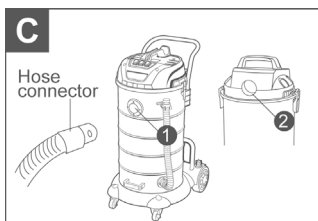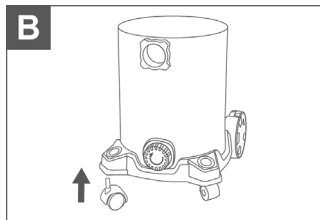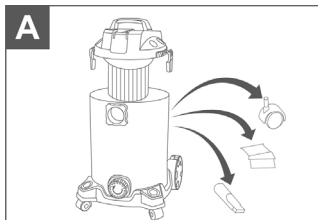

## OPERATION

- a) Release the lock block to open the up housing, take out wheels and accessories. (see Figure A)
- b) Install 4 small wheels. (see Figure B)
- c) Put the hose connector into ①, the suction function is available Put the hose connector into ②, the blow function is available. (see Figure C)
- d) Insert the handle into the tube with a twisting force. (see Figure D)
- e) Dual storage. (see Figure E)
- f) Hold the plug and insert into socket. (see Figure F)
- g) Press the switch button to turn on/off the cleaner. (see Figure G)

To be safe, there is a water-proof switch cover. Please replace the water-proof cover once find it broken.

## MAINTENANCE&MALFUNCTIONS

| Fault                                        | Possible cause                                                                                                                                                                                                                                                                                                                                                                | Solution                                                                                                                                                                                                            |
|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The motor does not work                      | <ul style="list-style-type: none"> <li>● Check if the plug of power supply is plugged in properly.</li> <li>● Check if the outlet of power supply is powered on.</li> <li>● Check if the power switch of the vacuum cleaner is turned on.</li> <li>● Check whether the brushes are burnt or worn, whether the switch of the vacuum cleaner is damaged or not, etc.</li> </ul> | <p>Reinsert the plug into the socket. Turn on the switch of socket or replace the socket of power supply. Turn on the switch. Please contact the after-sales maintenance in time.</p>                               |
| Reduced suction                              | <ul style="list-style-type: none"> <li>● Check if accessories such as suction tube or dust bags are blocked.</li> <li>● Check if the dust collector is full.</li> <li>● Is the filter clogged or not.</li> </ul>                                                                                                                                                              | <p>Remove the blockage and clean it in time. Clean the dust collector. Clean the dust filter.</p>                                                                                                                   |
| Motor overheating                            | <p>The continuous operating time is too long, the brushes and commutators are worn, causing to generate too large sparks, too much dust to stick to the dust filter, and the dust collector is full of dust, etc.</p>                                                                                                                                                         | <p>You can take a rest and then use it. If the appliance also heats up after a short time, you need to open the dust collector to clean up the trash inside.</p>                                                    |
| Suction drop                                 | <p>Check whether the motor is faulty, the brush is worn, the dust filter is damp, the dust chamber is full of dust, the hose and the suction nozzle or exhaust port are blocked, the pipeline is leaking, the interface is poorly sealed, etc.</p>                                                                                                                            | <p>Confirm whether the motor operates normally, clean the filter, dust cup, and hose, and re-tighten accessories at the interface seal.</p>                                                                         |
| Body overheating or excluded gas overheating | <ul style="list-style-type: none"> <li>● Is the suction normal?</li> <li>● Has it been used for more than 30 minutes?</li> </ul>                                                                                                                                                                                                                                              | <p>The heat exhausted from the body is caused by the heat generated by the heat conduction of motor. It is a normal temperature, please continue to use it. Please stop and rest for 5 minutes before using it.</p> |





   **Jadevermall**  
**www.jadevermall.com**

KEYWAY TECHNOLOGY (NANTONG) CO., LTD  
No.99, Gugang Road, Chongchuan District,  
Nantong City, China  
**MADE IN CHINA 0125.J03**

