



说明书材质要求：105g 有光铜版纸	说明书成品尺寸：105*143mm
Black (单色印刷)	
折叠方式：风琴折 (20P 以下用风琴折)	备注：
特别注意：此页内容不印刷	

风琴折 + 对折 页面顺序 16P 页面顺序 <table><tr><td>9</td><td>10</td><td>11</td><td>封面</td></tr><tr><td>12</td><td>13</td><td>14</td><td>封底</td></tr></table> <table><tr><td>1</td><td>2</td><td>3</td><td>4</td></tr><tr><td>5</td><td>6</td><td>7</td><td>8</td></tr></table>	9	10	11	封面	12	13	14	封底	1	2	3	4	5	6	7	8	20P 页面顺序 <table><tr><td>11</td><td>12</td><td>13</td><td>14</td><td>封面</td></tr><tr><td>15</td><td>16</td><td>17</td><td>18</td><td>封底</td></tr></table> <table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td></tr><tr><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr></table>	11	12	13	14	封面	15	16	17	18	封底	1	2	3	4	5	6	7	8	9	10
9	10	11	封面																																		
12	13	14	封底																																		
1	2	3	4																																		
5	6	7	8																																		
11	12	13	14	封面																																	
15	16	17	18	封底																																	
1	2	3	4	5																																	
6	7	8	9	10																																	


更改记录	1. 非自制工厂				
	1223.V03	2023.12.21	YJJ		
	版本号	日期	设计师		

ingco

www.ingco.com

**PRODUCT
MANUAL**

VIBRATOR POKER

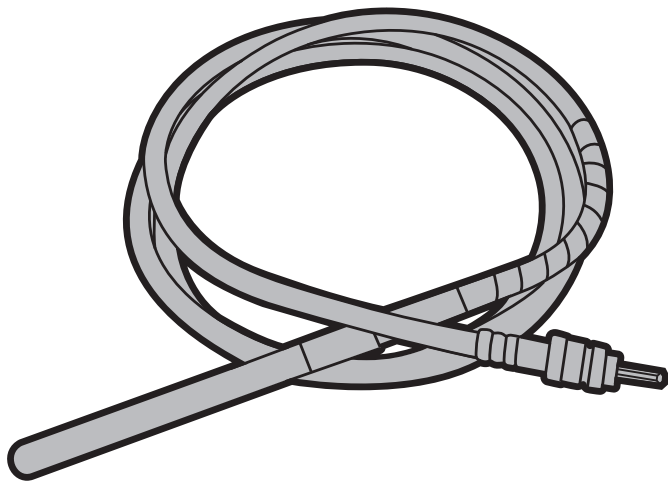

**VBP1381 VBP1382 VBP1451
VBP1452 VBP1601 VBP1602**



Original Instructions

GENERAL SAFETY WARNINGS**⚠ WARNING**

It needs 10 to 15 minutes break per 40 minutes running Our vibrator shaft uses high quality Mn steel, hose, and 70# steel wire. Both headcap and rotary shaft adopt 40Cr steel, well-galvanized after heat treatment.

THE SYMBOLS IN INSTRUCTION MANUAL


	Read the instruction manual before using.
	Safety alert. Please only use the accessories supported by the manufacturer.
	To prevent injury wear the following protective items: Gloves, hard hat, work boots, ear plugs, safety glasses and any other protective items required by job conditions.
	
	
	

SPECIFICATIONS

Model No.	VBP1381	VBP1382	VBP1451	VBP1452	VBP1601	VBP1602
Diameter	38mm	38mm	45mm	45mm	60mm	60mm
Length	600mm	600mm	600mm	600mm	600mm	600mm
Vibrating frequency	200Hz	200Hz	200Hz	200Hz	200Hz	200Hz
Vibrating amplitude	1.2mm	1.2mm	1.2mm	1.2mm	1.25mm	1.25mm
Flexible hose diameter	30mm	30mm	30mm	30mm	32mm	32mm
Flexible shaft diameter	10mm	10mm	10mm	10mm	12mm	12mm
Coupling type	Claw	HEX	Claw	HEX	Claw	HEX

- Due to our continuing program of research and development, the specifications herein are subject to change without notice.

OPERATION PICTURE

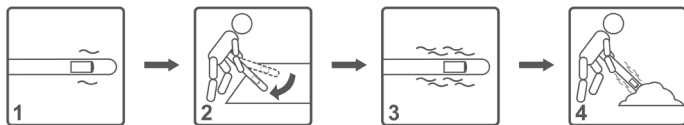

OPERATION

1. In order to prevent steel flexible shaft and steel belt from rusting which will influence use and service life, water is forbidden to enter into the hose joint.
2. The bend semidiameter of hose shouldn't be more than 50cm in the process of operation.

MAINTENANCE

1. After using, clean the hose and vibrator head.
2. If appear the following situations, please take part, check and clean: after running 50-100 hours, can't switch neatly, having abnormal sound. Before doing these, you had better hit the vibrator first. Head cap and hose joint are left screw thread, while shaft joint is right screw thread.
3. Check every part and make sure they are ok. (bearing and seal are wearing parts). Whether the center-adjustable bearing runs neatly, and the distance of couloir s ball bearing is about 200u. The number can't be too big or too small.
4. When install again, except bearing, all parts must be cleaned from oil stain. Make sure that the conical surface and interior sleeve have no oil or it can't vibrator.

