



说明书材质要求： 105g 有光铜版纸	说明书成品尺寸： 105*143mm
第一：专色用 6级防晒油墨 +CMYK油墨要求： 1.PANTONE137C专色油墨（ 专色用6级防晒油墨 ）： 如果自己配色，油墨配比为：酒联中黄（ 防晒 ）2000g 酒联金红（ 防晒 ）225g 2.C色油墨：酒联天蓝墨 3.M色油墨：酒联金红墨 4.Y色油墨：pantone123C专色油墨 5.K色油墨：酒联黑墨	第二：特别注意： 1.印刷时看样请参考我司提供的实物样品颜色。不得偏色 2.137C的专色 不得 参考C=0,M=35,Y=90,K=0对应的四色 色谱颜色来看样印刷 Pantone 137C Black（两色印刷）
折叠方式： 风琴折 （ 20P以下用风琴折 ）/ 骑马钉 （ 20P以上用骑马钉 ） 特殊情况：16P/20P：风琴折 + 对折	备注：

特别注意：此页内容不印刷

风琴折 + 对折 页面顺序

16P 页面顺序

9	10	11	封面
12	13	14	封底

1	2	3	4
5	6	7	8

20P 页面顺序

11	12	13	14	封面
15	16	17	18	封底

1	2	3	4	5
6	7	8	9	10

 
更改记录	1. 新产品			更新并增加内容		
	1124.V01	2024.11.04	Athena	0126.V02	2026.1.17	Kitty
	版本号	日期	设计师	版本号	日期	设计师

ingco®

www.ingco.com

**PRODUCT
MANUAL**

CORDLESS PRESSURE WASHER

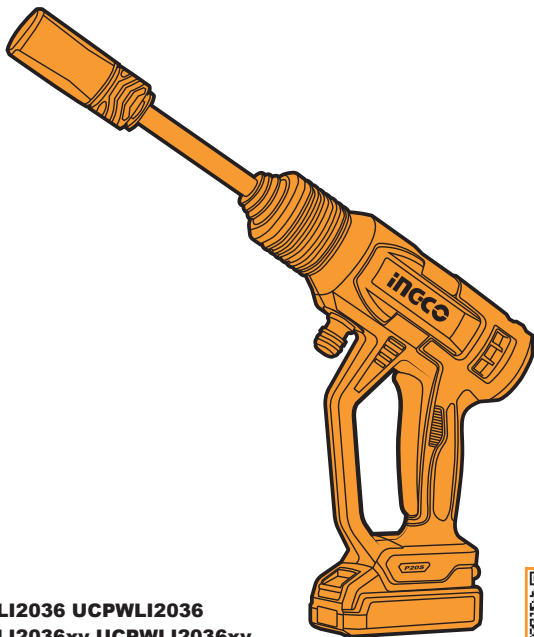

CPWLI2036 UCPWLI2036
CPWLI2036xy UCPWLI2036xy
x(blank,1,2,3,4,5,6,7,8,9,E,S,A,M)
y(blank,-1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)



SCAN FOR VIDEO

GENERAL SAFETY WARNINGS

⚠ WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way.** **Do not use any adapter plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*
- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) **Disconnect the plug from the power source and/or remove the battery**

pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. *Such preventive safety measures reduce the risk of starting the power tool accidentally.*

- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. *Power tools are dangerous in the hands of untrained users.***
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. *Many accidents are caused by poorly maintained power tools.***
- f) **Keep cutting tools sharp and clean. *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.***
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. *Use of the power tool for operations different from those intended could result in a hazardous situation.***
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease. *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.***

5) Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer. *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.***
- b) **Use power tools only with specifically designated battery packs. *Use of any other battery packs may create a risk of injury and fire.***
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. *Shorting the battery terminals together may cause burns or a fire.***
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. *Liquid ejected from the battery may cause irritation or burns.***

- e) **Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*
- f) **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*
- g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

6) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
- b) **Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorized service providers*

BATTERY SAFETY WARNINGS

Save these instructions.

⚠ CAUTION!

Only use genuine original batteries. *Use of non-genuine batteries, or batteries that have been altered, may result in the battery bursting causing fires, personal injury, and damage. It will also void the warranty for the tool and charged and dark areas invite accidents.*

⚠ WARNING!

- a) **Do not dismantle, open or shred secondary cells or batteries.**
- b) **Keep batteries out of the reach of children.** *Battery usage by children should be supervised. Especially keep small batteries out of reach of small children.*
- c) **Seek medical advice immediately if a cell or a battery has been swallowed.**
- d) **Do not expose cells or batteries to heat or fire.** *Avoid storage in direct sunlight.*
- e) **Do not short-circuit a cell or a battery.** *Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.*
- f) **Do not remove a cell or battery from its original packaging until required for use.**
- g) **Do not subject cells or batteries to mechanical shock.**
- h) **In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes.** *If contact has been made, wash the affected area with copious amounts of water and seek medical advice.*
- i) **Do not use any charger other than that specifically provided for use with the equipment.**
- j) **Observe the plus (+) and minus (-) marks on the cell, battery and equipment and ensure correct use.**
- k) **Do not use any cell or battery which is not designed for use with the equipment.**
- l) **Do not mix cells of different manufacture, capacity, size or type within a device.**
- m) **Always purchase the battery recommended by the device manufacturer for the equipment.**
- n) **Keep cells and batteries clean and dry.**
- o) **Wipe the cell or battery terminals with a clean dry cloth if they become**

dirty.

- p) **Secondary cells and batteries need to be charged before use.** *Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.*
- q) **Do not leave a battery on prolonged charge when not in use.**
- r) **After extended periods of storage, it may be necessary to charge and discharge the cells or batteries times to obtain maximum performance.**
- s) **Retain the original product literature for future reference.**
- t) **Use the cell or battery only in the application for which it was intended.**
- u) **When possible, remove the battery from the equipment when not in use.**
- v) **Dispose of properly.**

Tips for maintaining maximum battery life

- a) **Charge the battery cartridge before completely discharged.** *Always stop tool operation and charge the battery cartridge when you notice less tool power.*
- b) **Never recharge a fully charged battery cartridge.** *Overcharging shortens the battery service life.*
- c) **Charge the battery cartridge with room temperature at 10°C-40°C (50°F-104°F).** *Let a hot battery cartridge cool down before charging it.*
- d) **Charge the battery cartridge if you do not use it for a long period (more than six months).**

Important safety instructions for battery cartridge

- a) **Before using battery cartridge, read all instructions and cautionary markings on battery charger, battery, and) product using battery.**
- b) **Do not disassemble battery cartridge.**
- c) **If operating time has become excessively shorter, stop operating immediately.** *It may result in a risk of overheating, possible burns and even an explosion.*
- d) **If electrolyte gets into your eyes, rinse them out with clear water and seek medical attention right away.** *It may result in loss of your eyesight.*
- e) **Do not short the battery cartridge:**
 - *Do not touch the terminals with any conductive material.*
 - *Avoid storing battery cartridge in a container with other metal objects such as nails, coins, etc.*

- *Do not expose battery cartridge to water or rain.*
 - *A battery short can cause a large current flow, overheating, possible burns and even a breakdown.*
- f) **Do not store the tool and battery cartridge in locations where the temperature may reach or exceed 50°C (122°F).**
- g) **Do not incinerate the battery cartridge even if it is severely damaged or is completely worn out. The battery cartridge can explode in a fire.**
- h) **Be careful not to drop or strike battery.**
- i) **Do not use a damaged battery.**
- j) **Follow your local regulations relating to disposal of battery.**

Tool / battery protection system

The tool is equipped with a tool/battery protection system. This system automatically cuts off power to the motor to extend tool and battery life. The tool will automatically stop during operation if the tool or battery is placed under one of the following conditions:

Overload protection

When the battery is operated in a manner that causes it to draw an abnormally high current, the tool automatically stops without any indication. In this situation, turn the tool off and stop the application that caused the tool to become overloaded. Then turn the tool on to restart.

Overheat protection

When the tool/battery is overheated, the tool stops automatically. In this situation, let the tool/battery cool before turning the tool on again.

Transportation

Batteries comply with all applicable shipping regulations as prescribed by industry and legal standards (for more information, check with the manufacturer).

Transporting batteries can possibly cause fire if the battery terminals inadvertently come in contact with conductive materials. When transporting batteries, make sure that the battery terminals are protected and well insulated from materials that could contact them and cause a short circuit.

The information provided in this section of the manual is provided in good faith and believed to be accurate at the time the document was created. However, no warranty, expressed or implied, is given. It is the buyer's responsibility to ensure

that its activities comply with the applicable regulations.

Protecting the environment

Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.

Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Rechargeable battery pack

This long-life battery pack must be recharged when it fails to produce sufficient power on jobs which were easily done before. At the end of its technical life, discard it with due care for our environment:

- Run the battery pack down completely, then remove it from the tool.
- Lithium-ion cells are recyclable. Take them to your dealer or a local recycling station. The collected battery packs will be recycled or disposed of properly.

THE SYMBOLS IN INSTRUCTION MANUAL

	Read the instruction manual before using.
	CE conformity.
	Wear safety glasses, hearing protection and dust mask.
	Safety alert. Please only use the accessories supported by the manufacturer.
	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.
	The unit is not suitable for connection to a drinking water supply.
	High- and low-pressure regulating handedness indication
	Danger symbol with information about preventing personal injury from electric shocks.
	Charging the battery only below 40°C
	Always recycle batteries.
	Do not destroy battery by fire.
	Do not expose battery to water

ADDITIONAL SAFETY WARNING

Pressure washer safety warnings

- a) **Appliance shall not be used by children.** *Children should be supervised to ensure that they do not play with the appliance.*
- b) **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.**
- c) **Pressure water must not be directed at persons, animals, live electrical equipment or the appliance itself.**
- d) **Wear appropriate protective clothing and goggles to prevent water or dirt from splashing back.**
- e) **Do not use the device near flammable liquids or gases.** *Failure to comply will result in the risk of fire or explosion.*
- f) **Do not spray flammable liquid, there is a risk of explosion risks.** *If the cleanser comes into contact with your skin, rinse with plenty of water to avoid burns!*
- g) **Be aware that there is a tripping hazard when using the pressure washer with the inlet hose.**
- h) **Do not run over, crush, or break the water inlet hose to prevent damage to the water inlet hose and personal injury.**
- i) **Do not use the appliance if important parts of the appliance are damaged, e.g., safety devices, pressure hoses.**
- j) **Learn the maximum inlet water pressure.** *Read information in the specifications section for the appropriate details on connection to water mains.*
- k) **Always use the hose-sets supplied with the appliance.** *Read instructions in the assembly section to learn precautions for connection to water mains.*
- l) **The water filling aperture should not be opened during use.**
- m) **Follow the instructions in the assembly section to maintain water pressure.**
- n) **Do not use in swimming pools containing water.** *Do not use to clean windows.*
- o) **Comply with the requirements of the local water supply company.**
- p) **Always be sure that the appliance is switched off and battery cartridge is removed before carrying out any work on the tool.**
- q) **Do not use damaged or incomplete equipment, or equipment modified**

without the manufacturer's permission.

- r) **Only use the original accessories.** *Do not modify the equipment.*
- s) **If important components such as the water inlet hose, nozzle, or spray gun are damaged, do not use them.**
- t) **Protects pressure washer from frost and dry operation.**
- u) **High pressure hoses, fittings and coupling are important for the safety of the machine.** *Use only hoses, fittings and couplings recommended by the manufacturer.*
- v) **Store equipment in a dry place and out of reach of children.**

RESIDUAL RISKS

Even when the power tool is used as prescribed it is not possible to eliminate all residual risk factors. The following hazards may arise in connection with the power tool's construction and design:

- a) Health defects resulting from vibration emission if the power tool is being used over longer period of time or not adequately managed and properly maintained.
- b) Injuries and damage to property to due to broken accessories that are suddenly dashed.

 
⚠ WARNING! This power tool produces an electromagnetic field during operation. This field may under some circumstances interfere with active or passive medical implants. To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their physician and the medical implant manufacturer before operating this power tool.

INTENDED USE

This tool is intended to clean dirt and irrigation by using water jet for household use. By offering selectable spray type, the tool functions to improve your washing as well as lawn and garden watering.

This equipment is not suitable for commercial use.

SPECIFICATIONS

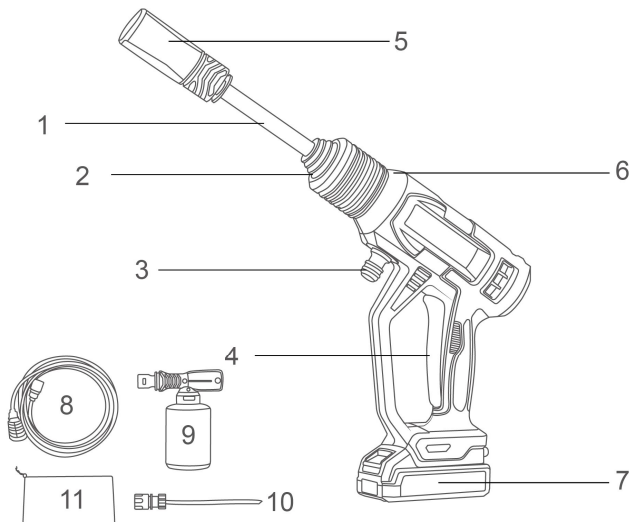

Components

- | | |
|---------------------------------|--|
| 1. Lance extension | 8. Water inlet hose with quick connector |
| 2. Locking slots | 9. Foam nozzle |
| 3. Water hose connector | 10. Self-suction connector |
| 4. Switch trigger | 11. Portable bag |
| 5. Nozzle | |
| 6. Tool housing | |
| 7. Battery cartridge (optional) | |

Technical specifications

Model No.	CPWLI2036 UCPWLI2036 CPWLI2036xy UCPWLI2036xy
Voltage	20 V
Max. work pressure	2.4MPa (24.8 Bar)
Work pressure	1.4MPa (14.0 Bar)
Max. suction height	3 m
Water flow rate	2.8 L/min
Foam bottle volume	300 mL

Model No. NOTE: x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M); y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

- Due to our continuing program of research and development, the specifications herein are subject to change without notice.
- Specifications and battery cartridge may differ from country to country.

Accessories

1. 2-pattern spray gun 1set
2. 6m water inlet hose with quick connector 1pcs
3. Foam nozzle 1pcs
4. Self-suction connector 1pcs
5. Portable bag 1pcs

⚠ WARNING!

Only use original battery pack and battery charger as below for this power tool:









Product	Battery pack		
Model No.	Type	Rated voltage	Rated capacity
FBLI2001 FBLI2001xy	Lithium-Ion	18.5V d.c., 20V Max	2.0Ah
FBLI2002 FBLI2002xy			4.0Ah
FBLI2003 FBLI2003xy			5.0Ah

Model No. NOTE: x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M); y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)




Product	Battery pack charger			
Model No.	Input power	Input voltage	Output rated voltage	Output rated current
FCLI2001 FCLI2001xy	50W	220-240V ~50/60Hz	20V d.c.	2A
FCLI2001-9		100-240V ~50/60Hz		
UFCLI2001 UFCLI2001xy		110-120V ~50/60Hz		
FCLI20411 FCLI20411xy FCLI2034 FCLI2034xy	105W	220-240V ~50/60Hz	21V d.c.	4A
FCLI20411-9 FCLI2034-9		100-240V ~50/60Hz		
UFCLI20411 UFCLI20411xy UFCLI2034 UFCLI2034xy		110-120V ~50/60Hz		

Model No. NOTE: x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M); y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

        OPERATION PICTURE

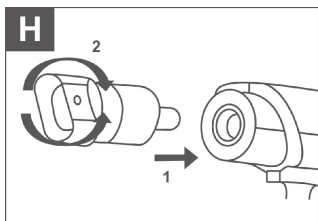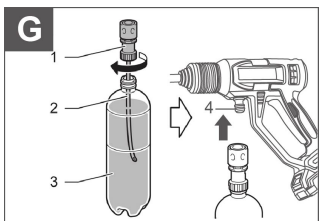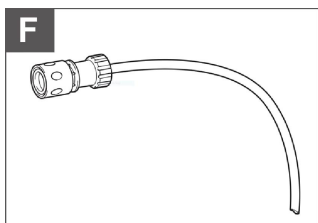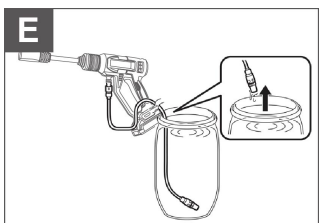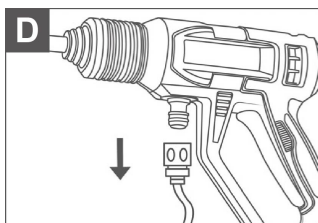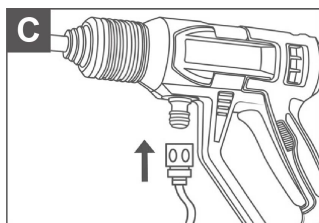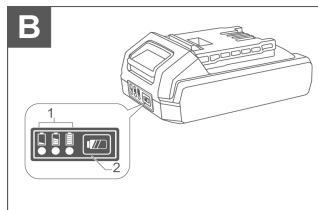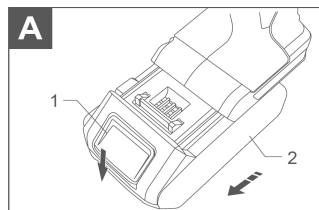

OPERATION PICTURE

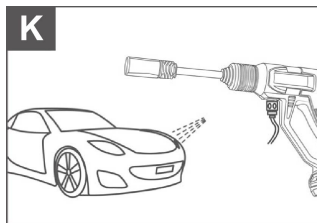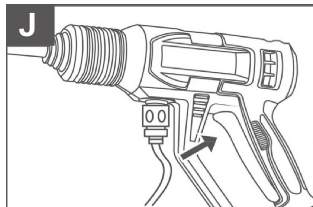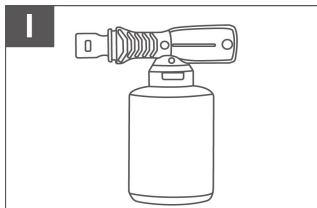   

OPERATION

Assembly

CAUTION!

- Always be sure that the tool is switched off and the battery cartridge is removed before adjusting or checking function on the tool.
- See the following instructions for the functions of the operating elements.
- Ensure safety instructions are followed at all times!

Installing or removing battery cartridge (see Figure A)

Figure A: 1. Button 2. Battery cartridge

CAUTION!

- Always switch off the tool before installing or removing of the battery cartridge.
- Hold the tool and the battery cartridge firmly when installing or removing battery cartridge. Failure to hold the tool and the battery cartridge firmly may cause them to slip off your hands and result in damage to the tool and battery cartridge and a personal injury.

To remove the battery cartridge, slide it from the tool while sliding the button on the front of the cartridge.

To install the battery cartridge, align the tongue on the battery cartridge with the groove in the housing and slip it into place. Insert it all the way until it locks in place with a little click.

CAUTION!

- Always install the battery cartridge fully until the button completely release. If not, it may accidentally fall out of the tool, causing injury to you or someone around you.
- Do not install the battery cartridge forcibly. If the cartridge does not slide in easily, it is not being inserted correctly.

Indicating the remaining battery capacity (see Figure B)

Figure B: 1. Indicator lamps 2. Check button

Press the check button on the battery cartridge to indicate the remaining battery capacity. The indicator lamps light up for few seconds.

Indicator lamps		Remaining capacity
 Lighted	 Off	
		• >80%
		• 30% to 80%
		• <30%

NOTE: Depending on the conditions of use and the ambient temperature, the indication may differ slightly from the actual capacity.

Installing or removing water pipe (see Figure C, D)

CAUTION!

The unit is not suitable for connection to a potable water supply

When installing, push the quick water inlet connector up and insert it into the water inlet connector on the machine. After inserting, gently pull the water pipe back to check whether it is firmly installed and does not fall off.

When removing the water pipe, pull down the external plastic sleeve of the water inlet quick connector to remove the water pipe.

Water connection (see Figure E)

Access the water in the container: When accessing the water in the container, you can directly put the end of the water pipe with the filter head into the container, and the car wash will automatically absorb water.

ATTENTION!

- **When accessing the water in the container, the lowest water level should be higher than the height of the filter head.**
- **When accessing the water in the container, ensure that there is no cloudy debris in the water, otherwise it is easy to block the filter head.**

Installing plastic bottle adapter (optional accessory) (see Figure F, G)

Figure F: 1. Plastic bottle adapter 2. Suction pipe
3. Plastic bottle 4. Water hose connector

- a) Fill water in a plastic bottle.
- b) Throw the suction pipe down through the bottle opening.
- c) Attach the adapter to the bottle by threading the nut of the coupling sleeve.
- d) Attach the plastic bottle adapter to the water hose connector on the pressure washer.

Place the coupling sleeve over the inlet of the connector and push it through until the coupling sleeve is secured in place.

CAUTION!

Be sure to attach the plastic bottle adapter securely to the pressure washer and plastic bottle. Failure to do so may cause the bottle to fall resulting in personal injury.

NOTE: A use of 2-liter (half-gallon) plastic bottle can be favored for containing water.

Installation or removing of spray gun lance extension (see Figure H)

Installation

The first step is to insert the spray gun **lance extension** into the joint position of the machine until it cannot be pushed. The second step is to rotate the spray gun body to the left or right, stop rotating and release the spray gun when it can spring effectively, and then gently rotate the spray gun lever. If there is no rotation, install it in place.

Removing

When removing the spray gun, push the gun into the machine and rotate it at the same time (about 90 degrees) to remove the gun.

NOTE: When installing the gun shaft, align the positioning buckle on the gun shaft with the slot position inside the machine.

Foam nozzle (see Figure I)

For add soap need take off the foam nozzle first, pour the soap liquid and water into the soap liquid pot according to the proportion, and then install the soap pot with foam nozzle.

ATTENTION!

The device is designed for use with neutral, biodegradable cleaners. Other cleaners or chemicals may compromise the safety of the pressure washer and cause damage to it.

Nozzle functions

Multi-pattern (2-in-1) spray nozzle features a range of spray patterns that you can adjust depending on your washing needs. By combining two of the most-used spray patterns in one nozzle, simply dial in the right spray pattern for your task.

Power supply

The tool should be connected only to a power supply of the same voltage as indicated on the nameplate.

Operation

Switch On/Off (see Figure J)

Switch On: Press the switch to start the device.

Switch Off: Release the trigger.

After switch off remove the battery from the device.

Disconnect the high-pressure washer from the water supply system.

Press the switch to release the existing pressure in the system.

NOTE: After cleaning with detergent, rinse the detergent container with clean water.

Usage scenarios (see Figure K)

The equipment can be used for cleaning the family car, watering the flowers and washing the floor and carpet, etc.

MAINTENANCE&MALFUNCTIONS

Cleaning

CAUTION!

- Always be sure that the tool is switched off and the battery cartridge is removed before cleaning or performing any maintenance.
- Never use gasoline, benzine, thinner, alcohol or the like. Discoloration, deformation or cracks may result.

Ventilation openings and switch levers must be kept clean and free of foreign matter. Regularly clean the tool's air vents or whenever the vents start to become obstructed. The tool may be cleaned most effectively with compressed dry air.

WARNING!

- Always wear safety goggles when cleaning tools with compressed air.
- Do not attempt to clean by inserting pointed objects through openings.

Maintenance

CAUTION!

- Always be sure that the tool is switched off and the battery cartridge is removed before attempting to perform inspection or maintenance.
- Preventive maintenance performed by unauthorized personnel may result in misplacing of internal wires and components which could cause serious hazard.

Only use original spare parts / accessories from the manufacturer or authorized and qualified workshops.

Repairs should only be carried out by qualified technicians or by an authorized service center. Qualified technicians must have relevant training and experience, be familiar with the design and construction requirements of the product and understand and follow the safety regulations.

Protecting the Environment



Separate collection. Products marked with this symbol must not be disposed of with normal household waste. Products contain materials that can be recovered or recycled reducing the demand for raw materials. Please recycle electrical products according to local provisions.

Optional accessories

CAUTION!

Accessories or attachments are recommended for use with your tool specified in this manual. The use of any other accessories or attachments might present a risk of injury to persons. Only use accessory or attachment for its stated purpose.

If you need any assistance for more details regarding these accessories, ask your local Authorized Service Center.

NOTE: Some Accessories or attachments may be included in the tool package as standard accessories. They may differ from country to country

Transportation of the power tools

WARNING!

Categorically not to drop any mechanical impact on the packaging during transport. When unloading / loading is not allowed to use any kind of technology that works on the principle of clamping packaging.


Storage

- a) Pour the water from the wireless pressure washer completely empty.
- b) Disconnect the device from the water supply system.
- c) Open the battery pressure washer for a few seconds until no more water comes out of the spray gun. Turn off the device.
- d) Store the spray gun vertically with the connecting side down.
- e) Completely empty the inlet hose and filter head.
- f) If the inside of the pressure washer is not completely emptied of water, it can be damaged by frost in cold weather.
- g) Store the equipment and accessories in an anti-freezing position.

MAINTENANCE&MALFUNCTIONS

Troubleshooting

Problem	Possible reasons	Measures
Intense pressure fluctuations	The nozzle is dirty/blocked.	Rinse the nozzle with water. Clean nozzle holes with a needle if needed.
Equipment not working	Low battery power.	Charge the rechargeable battery.
Water system leak	The connection is not installed correctly.	Turn off the device and remove the battery. Reconnect the unit to the water supply.
No water or little water	The water pipe is incorrectly connected and not in place.	Reconnect the pipe to the machine connector.
	The water level is below the filter head and cannot absorb water.	Increase the amount of water, or let the filter head completely sink in the water.
	The filter header is blocked.	Cleaning filter head.
	The nozzle is blocked.	Clean the nozzle.
	The water pipe was held down.	Remove pressure or replace pipe.

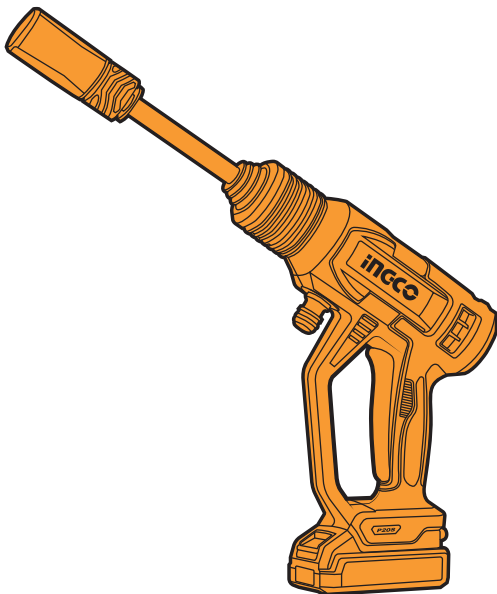 

MADE IN CHINA 0126.V02



INGCO Global

www.ingco.com

NEWWAY TECHNOLOGY (SUZHOU) CO., LIMITED

No. 20 Dagang Road, Fuqiao Town, Taicang City, China