



说明书材质要求： 105g 有光铜版纸	说明书成品尺寸： 105*143mm
第一：专色用 6级防晒油墨 +CMYK油墨要求： 1.PANTONE137C专色油墨（ 专色用6级防晒油墨 ）： 如果自己配色，油墨配比为：酒联中黄（ 防晒 ）2000g 酒联金红（ 防晒 ）225g 2.C色油墨：酒联天蓝墨 3.M色油墨：酒联金红墨 4.Y色油墨：pantone123C专色油墨 5.K色油墨：酒联黑墨	第二：特别注意： 1.印刷时看样请参考我司提供的实物样品颜色。不得偏色 2.137C的专色 不得 参考C=0,M=35,Y=90,K=0对应的四色 色谱颜色来看样印刷 Pantone 137C Black（两色印刷）
折叠方式： / 骑马钉（20P以上用骑马钉）	备注：

特别注意：此页内容不印刷

风琴折 + 对折 页面顺序

16P 页面顺序

9	10	11	封面
12	13	14	封底

1	2	3	4
5	6	7	8

20P 页面顺序

11	12	13	14	封面
15	16	17	18	封底

1	2	3	4	5
6	7	8	9	10

 
更改记录	1. 改新版说明书			1. 更新品名			1. 更新电池包线稿		
	0923.V05	2023.9.25	CH	0324.V06	2024.3.27	QQY	0225.V07	2025.2.10	QQY
	版本号	日期	设计师	版本号	日期	设计师	版本号	日期	设计师

INGCO

www.ingco.com

PRODUCT MANUAL

CORDLESS GAUGE STRAIGHT SHEAR

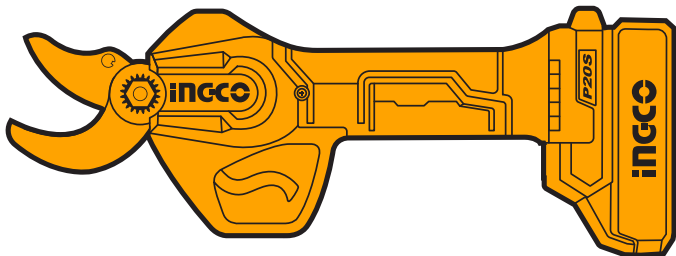

CSSLI20308 CSSLI20308xy UCSSLI20308xy
x(blank,1,2,3,4,5,6,7,8,9,E,S,A,M)
y(blank,-1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)



SCAN FOR VIDEO

GENERAL POWER TOOL SAFETY WARNINGS

⚠ WARNING Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way.** **Do not use any adapter plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*
- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) **Disconnect the plug from the power source and/or remove the battery**

pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. *Such preventive safety measures reduce the risk of starting the power tool accidentally.*

- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
- f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*

5) Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- b) **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*

- e) **Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*
- f) **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*
- g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

6) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
- b) **Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorized service providers*

BATTERY TOOL SAFETY WARNINGS

Save these instructions.

⚠ CAUTION

Only use genuine original batteries. *Use of non-genuine batteries, or batteries that have been altered, may result in the battery bursting causing fires, personal injury, and damage. It will also void the warranty for the tool and charged and dark areas invite accidents.*

⚠ WARNING

- a) **Do not dismantle, open or shred secondary cells or batteries.**
- b) **Keep batteries out of the reach of children.** *Battery usage by children should be supervised. Especially keep small batteries out of reach of small children.*
- c) **Seek medical advice immediately if a cell or a battery has been swallowed.**
- d) **Do not expose cells or batteries to heat or fire.** *Avoid storage in direct sunlight.*
- e) **Do not short-circuit a cell or a battery.** *Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.*
- f) **Do not remove a cell or battery from its original packaging until required for use.**
- g) **Do not subject cells or batteries to mechanical shock.**
- h) **In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes.** *If contact has been made, wash the affected area with copious amounts of water and seek medical advice.*
- i) **Do not use any charger other than that specifically provided for use with the equipment.**
- j) **Observe the plus (+) and minus (-) marks on the cell, battery and equipment and ensure correct use.**
- k) **Do not use any cell or battery which is not designed for use with the equipment.**
- l) **Do not mix cells of different manufacture, capacity, size or type within a device.**
- m) **Always purchase the battery recommended by the device manufacturer for the equipment.**
- n) **Keep cells and batteries clean and dry.**
- o) **Wipe the cell or battery terminals with a clean dry cloth if they become**

dirty.

- p) **Secondary cells and batteries need to be charged before use.** *Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.*
- q) **Do not leave a battery on prolonged charge when not in use.**
- r) **After extended periods of storage, it may be necessary to charge and discharge the cells or batteries times to obtain maximum performance.**
- s) **Retain the original product literature for future reference.**
- t) **Use the cell or battery only in the application for which it was intended.**
- u) **When possible, remove the battery from the equipment when not in use.**
- v) **Dispose of properly.**

Tips for maintaining maximum battery life

- a) **Charge the battery cartridge before completely discharged.** *Always stop tool operation and charge the battery cartridge when you notice less tool power.*
- b) **Never recharge a fully charged battery cartridge.** *Overcharging shortens the battery service life.*
- c) **Charge the battery cartridge with room temperature at 10°C-40°C (50°F-104°F).** *Let a hot battery cartridge cool down before charging it.*
- d) **Charge the battery cartridge if you do not use it for a long period (more than six months).**

Important safety instructions for battery cartridge

- 1. **Before using battery cartridge, read all instructions and cautionary markings on battery charger, battery, and) product using battery.**
- 2. **Do not disassemble battery cartridge.**
- 3. **If operating time has become excessively shorter, stop operating immediately.** *It may result in a risk of overheating, possible burns and even an explosion.*
- 4. **If electrolyte gets into your eyes, rinse them out with clear water and seek medical attention right away.** *It may result in loss of your eyesight.*
- 5. **Do not short the battery cartridge:**
 - a) *Do not touch the terminals with any conductive material.*
 - b) *Avoid storing battery cartridge in a container with other metal objects such as nails, coins, etc.*

- c) *Do not expose battery cartridge to water or rain.*
- d) *A battery short can cause a large current flow, overheating, possible burns and even a breakdown.*
- 6. **Do not store the tool and battery cartridge in locations where the temperature may reach or exceed 50°C (122°F).**
- 7. **Do not incinerate the battery cartridge even if it is severely damaged or is completely worn out. The battery cartridge can explode in a fire.**
- 8. **Be careful not to drop or strike battery.**
- 9. **Do not use a damaged battery.**
- 10. **Follow your local regulations relating to disposal of battery.**

Tool / battery protection system

The tool is equipped with a tool/battery protection system. This system automatically cuts off power to the motor to extend tool and battery life. The tool will automatically stop during operation if the tool or battery is placed under one of the following conditions:

Overload protection

When the battery is operated in a manner that causes it to draw an abnormally high current, the tool automatically stops without any indication. In this situation, turn the tool off and stop the application that caused the tool to become overloaded. Then turn the tool on to restart.

Overheat protection

When the tool/battery is overheated, the tool stops automatically. In this situation, let the tool/battery cool before turning the tool on again.

Transportation

Batteries comply with all applicable shipping regulations as prescribed by industry and legal standards (for more information, check with the manufacturer).

Transporting batteries can possibly cause fire if the battery terminals inadvertently come in contact with conductive materials. When transporting batteries, make sure that the battery terminals are protected and well insulated from materials that could contact them and cause a short circuit.

The information provided in this section of the manual is provided in good faith and believed to be accurate at the time the document was created. However, no warranty, expressed or implied, is given. It is the buyer's responsibility to ensure

that its activities comply with the applicable regulations.

Protecting the environment

Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.

Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Rechargeable battery pack

This long-life battery pack must be recharged when it fails to produce sufficient power on jobs which were easily done before. At the end of its technical life, discard it with due care for our environment:

- *Run the battery pack down completely, then remove it from the tool.*
- *Lithium-ion cells are recyclable. Take them to your dealer or a local recycling station. The collected battery packs will be recycled or disposed of properly.*

THE SYMBOLS IN INSTRUCTION MANUAL

	Double insulated for additional protection
	Read the instruction manual before using.
	CE conformity.
	Safety alert. Please only use the accessories supported by the manufacturer.
	Wear safety glasses, hearing protection and dust mask.
	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.
	Charging the battery only below 40°C
	Always recycle batteries.
	Do not destroy battery by fire.
	Do not expose battery to water

	Please read through all safety warnings and instructions carefully. Failure to follow warnings and instructions may result in electric shock, fire and serious burns and other accidents.
	Do not use or exposed electric pruning shear in rainy conditions
 	Never place hands near the cutting area of the electric pruning shear during operations.
	Never contact charged objects with electric scissors.

ADDITIONAL SAFETY WARNING

WARNING

Please read all instructions carefully, not complying with instruction may lead to electric shocks, fire or other serious damage.

This equipment is not designed to be used by people (including children) with limited physical, sensory or mental capacities or those with no experience and/or knowledge unless they are supervised by a person who is responsible for their safety or they have received instructions from such a person in to how to use the equipment safely. Children must always be supervised in order to ensure that they do not play with the equipment.

DANGER

When using the equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating instructions and safety regulations with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, hand over these operating instructions and safety regulations as well. We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety instructions

RESIDUAL RISKS

Even if you use this electric power tool in accordance with instructions, certain residual risks cannot be rules out. The following hazards may arise in connection with the equipment's construction and layout:

1. Lung damage if no suitable protective dust mask is used.
2. Damage to hearing if no suitable ear protection is used.
3. Health damage caused by hand-arm vibrations if the equipment is used over a prolonged period or is not properly guided and maintained.

DANGER

The electric power tool generates an electromagnetic field during operation. Under certain circumstances this field may actively or passively impede medical implants. To reduce the risk of serious or fatal injuries, we recommend persons with medical implants to consult their doctor and the

manufacturer of the medical implant prior to using the equipment.

Workplace safety

1. Keep work area clean and bright, messy and dimmed workplace may cause accidents.
2. Do not use the pruning shear in explosive, inflammable or humid environment.
3. Keep **children** and bystander away before operating the pruning shear to avoid accidental injury due to distraction.

Electrical safety

1. Pruning shear battery socket must be compatible with the power cable plug, do not modify the socket and plug.
2. Do not exposed the pruning shear to rain, humid environment, water or any other moisture that will risk electrical shock.
3. Keep the pruning shears away from heat, oil, sharp edges or moving parts.

Human safety

1. Attention must be kept at a high level of alertness. Please read the instructions and the manual carefully before operating the electric pruning shears. Doing the operation and staying alert, do not perform related operations in the case of fatigue, drug or drinking. Distraction during work can cause serious personal injury;
2. When using safety protection devices, always wear protective equipment such as goggles. Under appropriate conditions, wear dustproof Masks, non-slip safety shoes, hard hats and hearing protection devices to reduce personal injury;
3. Always remove all adjustment keys or wrenches before the electric pruning shears are turned on, left in the electric pruning branches. The key or wrench on the rotating part can cause personal injury;
4. When operating, keep your hands away from the cutting area. Under any conditions, never bend your hand to the material. Next, make sure that any material under the shearing zone is not damaged by the cutting edge and that it needs to be kept at all times. Pay attention to the balance between the feet and the body in order to be able to control the electric pruning shears in the event of an accident;

 
5. It is strictly forbidden to wear loose clothes and accessories when performing pruning and shearing operations. Make sure that hair, clothes and sleeves are faraway. Keep away from moving parts and avoid loose clothing, accessories, and long hair getting involved in moving parts.

INTENDED USE

This equipment is designed for cutting branches and plants with a diameter of max. 25mm (softwood). The diameter is smaller for hardwood. This equipment is not suitable for cutting metal. The equipment is to be used only for its prescribed purpose.

Any other use is deemed to be a case of misuse. The user/operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

SPECIFICATIONS

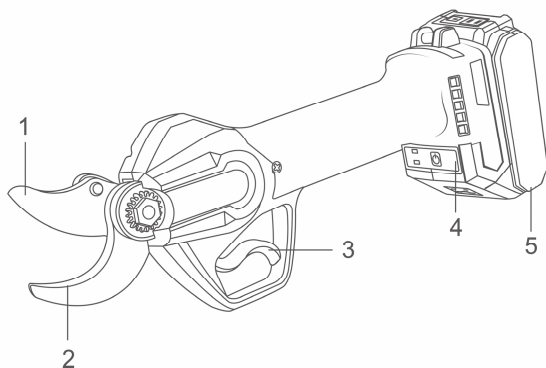

- | | |
|-------------------------------|---|
| 1. Cutting blade (movable) | 4. ON/OFF main switch
(cutting capacity setting) |
| 2. Counter blade (stationary) | |
| 3. Trigger | 5. Battery pack |

Technical specifications

Basic information of electric	
Operating voltage	20V
Lithium battery	2.0Ah
Cutting diameter (Max)	30mm (1-3/16") soft branches

⚠ WARNING!

Only use original battery pack and battery charger as below for this power tool:

Product	Battery pack		
Model No.	Type	Rated voltage	Rated capacity
FBLI2001 FBLI2001xy	Lithium-Ion	18.5V d.c., 20V Max	2.0Ah
FBLI2002 FBLI2002xy			4.0Ah
FBLI2003 FBLI2003xy			5.0Ah

Model No. NOTE: x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M); y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

Product	Battery pack charger			
Model No.	Input power	Input voltage	Output rated voltage	Output rated current
FCLI2001 FCLI2001xy	50W	220-240V ~50/60Hz	20V d.c.	2A
UFCLI2001 UFCLI2001xy		110-120V ~50/60Hz		
FCLI20411 FCLI20411xy FCLI2034 FCLI2034xy	105W	220-240V ~50/60Hz	21V d.c.	4A
UFCLI20411 UFCLI20411xy UFCLI2034 UFCLI2034xy		110-120V ~50/60Hz		

Model No. NOTE: x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M); y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

Product operation

PRECAUTIONS

when using pruning shears, please ensure that fingers and other human body parts are not within the working scope of the blade. The operator shall be responsible for the damage caused by the operator's violation of the cautions.

Setting up

1. Insert the battery into the power connector of the pruner.
2. switch ON the power switch of the pruner. Due to the first-time usage that the LED display indicator will be green and the buzzer will buzz for 1 time.
3. Double click the trigger, the pruner blades will automatically open.
4. Normal pruning: press trigger to close the blades and release the trigger to open blades.
Blade closing: continue to press the trigger, a buzz means the blade will stay closed.
5. Before operation, in order to see if the pruner performances well, please press the trigger to close and release the trigger to open the blades without cutting anything. Repeat this for a few times.



Main switch (function description)

- Long press 2 seconds to turn on the machine
- Press once to switch gear
- Long press 2 seconds to turn off the machine



Two gear shifts the size of knife edge (cutting capacity) is different.

Trigger (function description)

- Quickly press the trigger twice to activate the action
- Suspend work for a long time, after dormancy, the machine also needs to press the trigger twice to activate the action.
- The knife edge will remain closed after long press of the trigger for 2 seconds, and the trigger will be reactivated by pressing the trigger for 2 times in a short time

Packing up

1. Press the trigger and hold for a few second and then release, the blade will close and will not open.

2. Switch off the battery, disconnect the battery.
3. Tidy up, clean up and pack the pruner into the tool box.

⚠ CAUTIONS

1. During charging, it is normal for the charger and battery to be warm.
2. If the battery is not used for a long period of time, it is recommended to charge the battery once every 3 months. This is to ensure the battery life is not affected by the low usage.
3. For new battery or battery unused for a long time, it will need about 5 charge-discharge cycles before achieving full capacity.
4. Do not recharge a fully charged battery just after a few minutes of usage, this will reduce the battery.
5. Do not use a damaged battery and do not disassemble the charger or battery.
6. Do not place battery near high temperature heat source, the battery high temperature heat source.
7. Do not charge the battery in outdoor or humid environment.
8. it is normal for the pruning shear to reduce cutting diameter when the battery capacity is getting low.
9. Do not use the pruning shear during charging. It must be disconnected from the battery during charging.
10. Do not store the battery in a humid environment.



Operation Precautions

Usage and Care for Pruning Shear

1. Do not cut branches beyond the specified diameter indicated, do not cut hard items such as metals, stone or any other non-plant materials. If the blades are worn or damaged, please replace the blades.
2. Keep the pruning shear clean, use a clean cloth to clean the pruning shear, battery and charger (do not use any abrasive or solvent-based cleaning agent), use a soft brush or a dry to clean the dust off the pruning shear head.
3. Do not immerse the pruning shear, battery or charger in any liquid.
4. Follow instructions as given for proper use of the pruning shear, do not use the pruning shear when the tool itself, battery or charger is damaged.

5. Do not use the pruning shear if it could not operate or shut down properly, send for servicing immediately. It is dangerous to use the pruning shear when the tool could not operate or shut down properly.
6. Please ensure the power pruner is powered OFF during any adjustment, changing.
7. accessories or storage. This protective measure aims to reduce the risk of accidental pruning shear activation.
8. Please ensure the blades are closed when not in use, storage of the pruning shear must keep out of reach from CHILDREN, do not allow any person who is not familiar with the pruner operation or instruction to use the pruning shear, it is dangerous to use the pruning shear without proper training and understanding.
9. The use of the pruning shear must comply with instructions stated in this manual and methods of use as well as taking in considerations of the working environment and nature of work undertaken. The use of the pruning shear not within its stated capability and specifications is dangerous.
10. Remove all dirt from the moving and fixed blades after each use, thereafter apply lubricant on the blade side where both moving and fixed blade contact. This will ensure the blades are maintained in good conditions and reduce resistance during use prolonging the pruner and blade lifespan.
11. Keep the battery out of reach from **CHILDREN**.
12. Do not use or place the battery under direct sunlight (or in vehicle that are under direct sunlight) that will cause the battery to overheat or burn shortening the battery lifespan.
13. Do not use the battery in electrostatic environment (above 64V).
14. Do not use battery that is corroded, with unpleasant odor or unusual appearance.
15. If the skin or clothing comes into direct contact with battery fluid, wash with clear water immediately.
16. Maintain the battery fully charged when the pruning shear is not used for a long period of time.

Irregularity measures

1. In the event the pruning shear is not able to cut through an object, released the trigger immediately and the moving blade will return to its open position

automatically.

2. In the event the pruning shear is cutting through a branch of particularly hardness, released the trigger immediately and the moving blade will return to its open position automatically.
3. In the event the battery is not charging properly, please check if the charger one provided with the package during purchase. Next is to ensure the supply voltage to the charger is same rating as the specification of the charger.
4. In the event of electric or mechanical malfunction, power OFF immediately.
5. Operating not following instructions in this manual may result battery fluid leakage, do not contact the leaked battery fluid. In the event of accidental contact with battery fluid, clean with clear water immediately. If the battery fluid keeps in contact with the eyes, wash with clear water and must seek hospital assistance. Fluid from leaked battery may cause irritations or burns.

Maintenance

Cleaning

Hazard! Always pull out the battery pack before starting any cleaning work.

- Keep all safety devices, air vents and the motor housing free of dirt and dust as far as possible. Wipe the equipment with a clean cloth or blow it with compressed air at low pressure.
- We recommend that you clean the device immediately each time you have finished using it.
- Clean the equipment regularly with a moist cloth and some soft soap. Do not use cleaning agents or solvents; these could attack the plastic parts of the equipment. Ensure that no water can seep into the device. The ingress of water into an electric tool increases the risk of an electric shock.

Blade Replacement

When the moving blade no longer crosses the fixed blade throughout its length, or when the power pruner could no longer have a clean cut after grinding, blade replacement is recommended to performed by authorized service centers.


1. For safety, before replacing the blade, please ensure the pruning shear is power OFF and power cable disconnected from the battery.
2. Clean up the blade after replacing, connect to power cable to battery, power ON to test the blade, close up the blade to complete the whole procedure.

MAINTENANCE&MALFUNCTIONS

Troubleshooting

Danger! Before troubleshooting, switch off the equipment and remove the battery. The table below contains a list of fault symptoms and explains what you can do to remedy the problem if your equipment fails to work properly. If you fail to localize and solve the problem after working through the list, please contact your nearest service workshop.

Fault	Possible cause	Remedy
The equipment does not work	-Set the ON-OFF main switch to the OFF position - Battery empty - Battery is not correctly inserted	- Set the ON-OFF main switch to ON - Charge battery - Remove battery and insert again
The equipment stops during cutting	- Battery empty - Battery capacity low	- Charge battery - Charge battery
The cutting blade becomes jammed in a thick branch	- Battery capacity low - Wood too hard - Wood diameter too large	- Charge battery - Wood is unsuitable for cutting - Wood is unsuitable for cutting
The cut is not smooth	- Cutting blade is blunt or worn	- Replace cutting blade

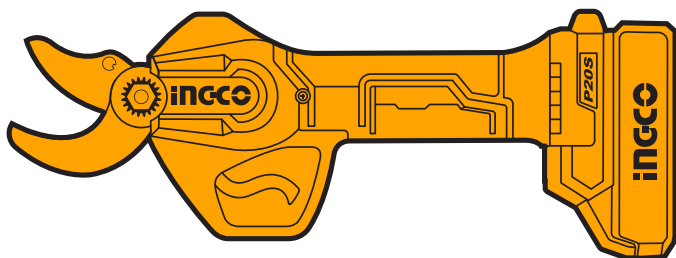 

MADE IN CHINA 0225.V07



INGCO Global

www.ingco.com

NEWWAY TECHNOLOGY (SUZHOU) CO., LIMITED
No. 20 Dagang Road, Fuqiao Town, Taicang City, China