



说明书材质要求：105g 有光铜版纸	说明书成品尺寸：105*143mm
第一：专色用6级防晒油墨+CMYK油墨要求： 1. PANTONE137C专色油墨（专色用6级防晒油墨）： 如果自己配色，油墨配比为：酒联中黄（防晒）2000g 酒联金红（防晒）225g 2. C色油墨：酒联天蓝墨 3. M色油墨：酒联金红墨 4. Y色油墨：pantone123C专色油墨 5. K色油墨：酒联黑墨	第二：特别注意： 1. 印刷时看样请参考我司提供的实物样品颜色。不得偏色 2. 137C的专色不得参考C=0, M=35, Y=90, K=0对应的四色 色谱颜色来看样印刷 Pantone 137C Black（两色印刷）
折叠方式：风琴折	备注：

特别注意：此页内容不印刷

风琴折 + 对折 页面顺序

16P 页面顺序

9	10	11	封面
12	13	14	封底

1	2	3	4
5	6	7	8

20P 页面顺序

11	12	13	14	封面
15	16	17	18	封底

1	2	3	4	5
6	7	8	9	10


更改记录	1. 新制作				
	0826.V01	2026.8.17	Kiko		
	版本号	日期	设计师		

ingco®

www.ingco.com

**PRODUCT
MANUAL**

BATTERY CHARGER

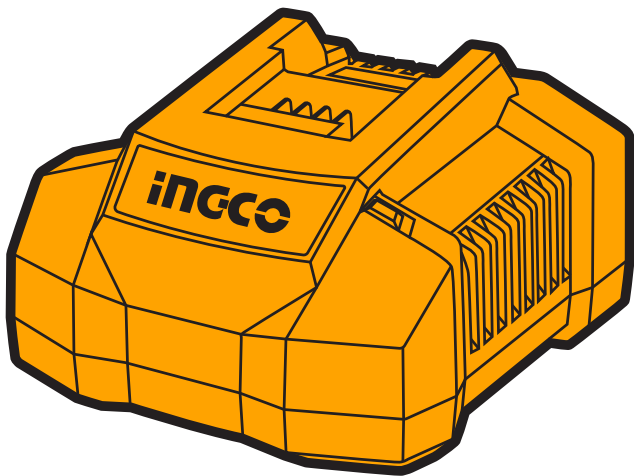

FCLI20411 UFCLI20411
FCLI20411xy UFCLI20411xy

x(blank,1,2,3,4,5,6,7,8,9,E,S,A,M)
y(blank,-1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)



Original Instructions

SPECIFICATIONS

Model No.	FCLI20411 FCLI20411xy	UFCLI20411 UFCLI20411xy	FCLI20411-9 UFCLI20411-9
Input	A.C. 220-240V 50/60Hz	A.C. 110-120V 50/60Hz	A.C. 100-240V 50/60Hz
Output	20V d.c.		

Model No. NOTE: x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M); y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

- Due to our continuing program of research and development, the specifications herein are subject to change without notice.
- Specifications may differ from country to country.

IMPORTANT SAFETY**INSTRUCTIONS CAUTION:**


- 1) **SAVE THESE INSTRUCTIONS** – This manual contains important safety and operating instructions for battery charger.
- 2) Before using battery charger, read all instructions and cautionary markings on (1) battery charger, (2) battery, and (3) product using battery.
- 3) To reduce risk of injury, charge only these brand rechargeable batteries. Other types of batteries may burst causing personal injury and damage.
- 4) Non-rechargeable batteries cannot be charged with this battery charger.
- 5) Use a power source with the voltage specified on the nameplate of the charger.
- 6) Do not charge the battery cartridge in presence of flammable liquids or gases.
- 7) Do not expose charger to rain or snow.
- 8) Never carry charger by cord or yank it to disconnect from receptacle.
- 9) After charging or before attempting any maintenance or cleaning, unplug the charger from the power source. Pull by plug rather than cord whenever disconnecting charger.

- 10) Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- 11) Do not operate charger with damaged cord or plug. If the cord or plug is damaged, ask authorized service center to replace it in order to avoid a hazard.
- 12) Do not operate or disassemble charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified serviceman. Incorrect use or reassembly may result in a risk of electric shock or fire.
- 13) The battery charger is not intended for use by young children or infirm persons without supervision.
- 14) Young children should be supervised to ensure that they do not play with the battery charger.
- 15) Do not charge battery cartridge when room temperature is BELOW 10°C (50°F) or ABOVE 40°C (104°F). At the cold temperature, charging may not start.
- 16) Do not attempt to use a step-up transformer, an engine generator or DC power receptacle.
- 17) Do not allow anything to cover or clog the charger vents.

Charging

- 1) Plug the battery charger into the proper AC voltage source. Charging light will flash in green color repeatedly.
- 2) Insert the battery cartridge into charger until it stops adjusting to the guide of charger.
- 3) When the battery cartridge is inserted, the charging light color will change from green to repeatedly green and charging will begin. The charging light will keep lighting up steadily during charging. Repeatedly green charging light indicates charged condition in 0 – 80% and green ones indicate 80 – 100%. The 80% indication mentioned above is approximate value. The indication may differ according to battery temperature or battery condition.

- 4) With finish of charge, the charging lights will change from repeatedly green to green.
- 5) Charging time varies by temperature (10°C (50°F) – 40°C (104°F)) that battery cartridge is charged at and conditions of the battery cartridge, such as a battery cartridge which is new or has not been used for a long period of time.
- 6) After charging, remove the battery cartridge from charger and unplug the charger.

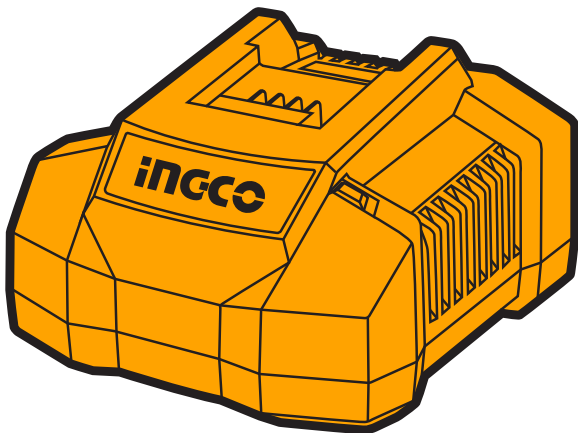

MADE IN CHINA 0826.V01

NEWWAY TECHNOLOGY (SUZHOU) CO., LIMITED



INGCO Global

www.ingco.com

No. 20 Dagang Road, Fuqiao Town, Taicang City, China