

Jadever

GLUE GUN



 
8W(Max.80W)

JDGL1603 JDGL1603xy

UJDTGL1603 UJDGL1603xy

x(blank,1,2,3,4,5,6,7,8,9,E,S,A,M)

y(blank,-1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

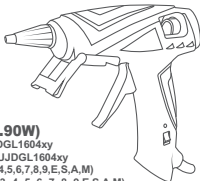


15W(Max.90W)

JDGL1604 JDGL1604xy

UJDGL1604 UJDGL1604xy

x(blank,1,2,3,4,5,6,7,8,9,E,S,A,M)

 y(blank,-1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

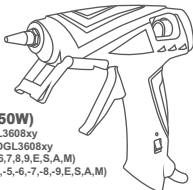

25W(Max.150W)

JDGL3608 JDGL3608xy

UJDGL3608 UJDGL3608xy

x(blank,1,2,3,4,5,6,7,8,9,E,S,A,M)

y(blank,-1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

PRODUCT
MANUAL

GENERAL POWER TOOL SAFETY WARNINGS

⚠ WARNING Read all safety warnings, instructions, illustrations and specifications provided with this power tool.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

a) Keep work area clean and well lit. *Cluttered or dark areas invite accidents.*

b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or

dust. *Power tools create sparks which may ignite the dust or fumes.*

- c) Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2) Electrical safety

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) Do not expose power tools to rain or wet conditions.** *Water*

entering a power tool will increase the risk of electric shock.

- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. *Damaged or entangled cords increase the risk of electric shock.***
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. *Use of a cord suitable for outdoor use reduces the risk of electric shock.***
- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. *Use of an RCD reduces the risk of electric shock.***

3) Personal safety

- a) Stay alert, watch what you are doing and use common sense**

when operating a power tool.
Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

- b) Use personal protective equipment. Always wear eye protection.** *Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites**

accidents.

- d) Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) Do not overreach.** *Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.*
- f) Dress properly.** *Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.*
- g) If devices are provided for the connection of dust extraction and collection facilities,** *ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.*

h) Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. *A careless action can cause severe injury within a fraction of a second.*

4) Power tool use and care

a) Do not force the power tool. Use the correct power tool for your application. *The correct power tool will do the job better and safer at the rate for which it was designed.*

b) Do not use the power tool if the switch does not turn it on and off. *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*

c) Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments,

changing accessories, or storing power tools. *Such preventive safety measures reduce the risk of starting the power tool accidentally.*

d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. *Power tools are dangerous in the hands of untrained users.*

e) Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. *Many accidents are caused by poorly maintained power tools.*

f) Keep cutting tools sharp and clean. *Properly maintained*

cutting tools with sharp cutting edges are less likely to bind and are easier to control.

g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

h) Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

5) Service

a) Have your power tool serviced by a qualified repair person using only identical replacement parts. This will

ensure that the safety of the power tool is maintained.

THE SYMBOLS IN INSTRUCTION MANUAL

	Double insulated for additional protection
	Read the instruction manual before using.
	CE conformity.
	Safety alert. Please only use the accessories supported by the manufacturer.
	Wear safety glasses, hearing protection and dust mask.
	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

SPECIFICATIONS

WARNING!

Do not open the casing! Dangerous voltage is found unprotected on some components inside the product's casing; contact with these may lead to electric shock.

- The product may only be repaired by qualified service personnel.
- The product may not be taken apart nor be changed.
- Do not place the product so that it may fall into water or another liquid.
- Do not put any items containing water on the product, for example a flower vase or a soda can.
- Disconnect the plug when the Glue Gun is not in use; let it cool off before storage.
- Check that the voltage that is indicated on the mark sign

| English
corresponds with the local power
grid voltage.

- The Glue Gun is not a toy, do not let children use it without supervision!
- Never leave the Glue Gun unattended when it is turned on.
- The Glue Gun is made for indoor usage; protect it from water and dampness.

The following safety precautions shall be followed to avoid the risk of fire:

- Be careful when you use the Glue Gun in spaces with inflammable material.
- Do not hold the Glue Gun over the same spot for a long time.
- Do not use the Glue Gun in explosive environments.
- Keep in mind that the heat can conduct to inflammable material that is out of sight.
- Place the Glue Gun on the holder after use and let it cool off before

storage.

- Do not leave the Glue Gun unattended when the cord is connected to the wall socket.

WARNING!

The glue is very hot during usage. It may cause burns on the skin.

Rinse immediately with cold water

INTENDED USE

 
 
 
You can use the glue gun to glue the following materials wood, plastics, textiles, cardboard, ceramics, leather, etc.

The equipment is to be used only for its prescribed purpose.

Keep in mind that the heat can conduct to inflammable material that is out of sight Place the Glue Gun on the holder after use and let it cool off before storage

Do not leave the Glue Gun unattended when the cord is connected to the wall socket

SPECIFICATIONS

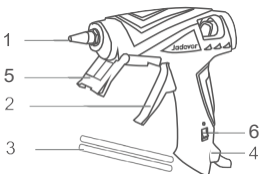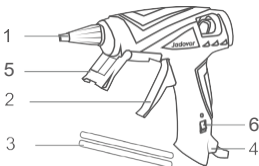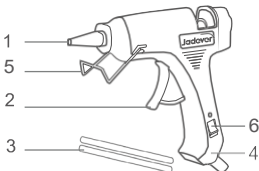

1. Nozzle

2. Trigger

3. Glue stick

4. Cable

5. Stand


6. Power switch

Technical specifications

Model No.	JDGL1603 JDGL1603-4 JDGL1603-6 JDGL1603-8 JDGL1603-9 JDGL1603S	UJDGL1603
Voltage	AC220-240	AC110-120
Frequency	50/60Hz	50/60HZ
Electricity consumption	8W(Max.80W)	8W(Max.80W)
Diameter glue stick	Ø 7mm	Ø 9/32"
Gluing capacity	5-8g/min	5-8g/min

Model No.	JDGL1604 JDGL1604-4 JDGL1604-6 JDGL1604-8 JDGL1604-9 JDGL1604S	UJDGL1604
Voltage	AC220-240	AC110-120
Frequency	50/60Hz	50/60HZ
Electricity consumption	15W(Max.90W)	15W(Max.90W)
Diameter glue stick	Ø 7mm	Ø 9/32"
Gluing capacity	5-8g/min	5-8g/min

Model No.	JDGL3608 JDGL3608-4 JDGL3608-6 JDGL3608-8 JDGL3608-9 JDGL3608S	UJDGL3608
Voltage	AC220-240	AC110-120
Frequency	50/60Hz	50/60HZ
Electricity consumption	25W(Max.150W)	25W(Max.150W)
Diameter glue stick	Ø 11mm	Ø 7/16 "
Gluing capacity	15-20g/min	15-20g/min

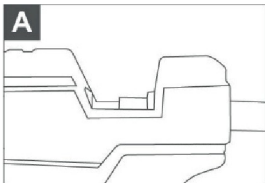 

OPERATION

Usage

- Connect the plug to the wall socket.
- Press switch to “I”, then allow the glue gun to warm up for approximately 5-7minutes before starting to work.
- Place a glue stick in the opening on the back of the gun as indicated in the picture.
- Push in the glue stick as far as possible.
- Press the trigger several times to feed the glue stick forward.
- Press the trigger to feed the glue forward when it has started to melt.
- Apply melted glue on the surfaces to be joined together, and then press the glued surfaces together for 15 seconds.

- Press switch to “O” while finish working, then unplug the glue gun.

Disposal

 
Follow local ordinances when disposing of this product.

If you are unsure about how to dispose of this product contact your municipality.

Note:

When the glue stick will be used up, the glue gun can't work regularly, because the trigger can't push the glue stick(see Figure A)

At this time, you should place a new one stick, so the new stick can push the former one, the glue gun will work regularly (see Figure B)

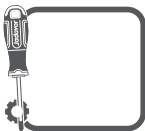

   **Jadevermall**
www.jadevermall.com

KEYWAY TECHNOLOGY (NANTONG) CO., LTD

MADE IN CHINA 0624.J02

No.99, Gugang Road, Chongchuan District,
Nantong City, China

