



说明书材质要求：105g 有光铜版纸	说明书成品尺寸： 105x143mm
第一：专色+CMYK油墨要求： 1.K色油墨：洒联黑墨	第二：特别注意： 暂无
	 Black（单色印刷）
折叠方式： 风琴折 （ 20P 以下 用风琴折 ）	备注：

特别注意：此页内容不印刷

风琴折 + 对折 页面顺序

16P 页面顺序

9	10	11	封面
12	13	14	封底

1	2	3	4
5	6	7	8

20P 页面顺序

 
11	12	13	14	封面
15	16	17	18	封底

1	2	3	4	5
6	7	8	9	10

更改记录	新产品			更新版式 增加xy货号			
	0723.J01	2023.7.3	Kitty	0624.J02	2024.6.24	lamer	
	版本号	日期	设计师	版本号	日期	设计师	

Jadever

HIGH PRESSURE WASHER

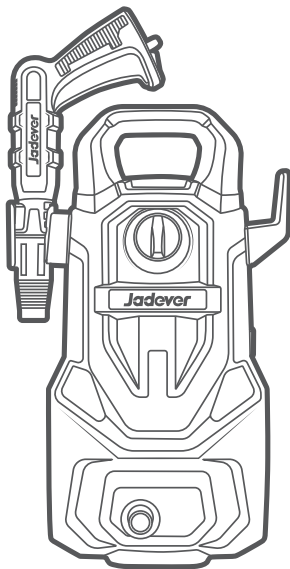

JDHP3A14 UJDHP3A14
JDHP3A14xy UJDHP3A14xy
x(blank, 1,2,3,4,5,6,7,8,9,E,S,A,M)
y(blank,-1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

**PRODUCT
MANUAL**

GENERAL SAFETY WARNINGS

Warning!

Please read and comply with these original instructions prior to the initial operation of your appliance and store them for later use or subsequent owners.

Apart from the notes contained herein the general safety provisions and rules for the prevention of accidents of the legislator must be observed.

Warnings and notes that are attached on the appliance provide important notes for the safe operation.

Hazard levels

Danger!

Pointer to immediate danger, if not avoided, which leads to severe injuries or death.

Warning!

Pointer to a possibly dangerous situation, if not avoided, which can lead to severe injuries or death.

Caution!

Pointer to a possibly dangerous situation, if not avoided, which can lead to minor injuries.

Attention: Pointer to a possibly dangerous situation, which can lead to property damage.

Electric components

Danger!

Risk of electric shock.

- Never touch the mains plug and the socket with wet hands.**
- Check the power cord with mains Plug for damage prior to every use.** Do not use the machine if a supply cord or important parts of the machine are damaged, e.g., safety devices, high pressure hoses, trigger gun.
- All current-conducting parts in the working area must be protected against jet water.**
- The mains plug and the coupling of an extension cable must be watertight and must never lie in water.** Moreover, the coupling may never lie

on the ground. The use of cable reels that ensure that the sockets are at least 60 mm above the ground is commended.

- e) **Make sure that the power cord or extension cable is not damaged by running over, pinching, dragging or the like.** Protect the power cords from heat, oil, and sharp edges.
- f) **Always switch off the mains disconnecting switch when leaving the appliance unattended.**

Warning!

The appliance may only be connected to an electric supply that has been installed by an electrician in accordance with IEC 60364.

- g) **The appliance may only be connected to alternate current.** The voltage must correspond with the type plate of the appliance.
- h) **For safety reasons, we recommend that you operate the appliance only via a residual current device (max. 30mA).**
- i) **An unsuitable electrical extension cable can be hazardous.** Only use an electrical extension cable which has been approved and labeled for this purpose and has an adequate cable cross-section outdoors: 1 - 10m: 1.5 mm²; 10 - 30m: 2.5 mm²
- j) **Always fully unreel the extension cable from the cable drum.**

Safe handling

Danger!

- a) **The user must be the appliance as intended.** The person must consider the local conditions and must pay attention to other persons in the vicinity when working with the appliance.
- b) **Check important components, such as high-pressure hose, hand spray gun and safety installations, for damage prior to every operation.** Immediately replace damaged components. Do not operate appliance with damaged components.
- c) **The appliance has been designed for use with the cleaning agent supplied or recommended by the manufacturer.** The use of the other cleaning agents or chemicals may adversely affect the safety of the appliance.
- d) **High-pressure jets can be dangerous if subject to misuse.** The jet must not be directed at persons, live electrical equipment or the machine itself.
- e) **Do not direct the jet against yourself or others in order to clean clothes**

or foot-wear.

- f) **Do not use the appliance within range of persons unless they wear protective clothing.**
- g) **Wear appropriate Personnel Protection Equipment (PPE) while operating the appliance.**

⚠ Warning!

- a) **The appliance must not be operated by children or untrained personnel.**
- b) **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or lacking experience and knowledge.**
- c) **Children must not play with this appliance.**
- d) **Supervise children to prevent them from playing with the appliance.**
- e) **Create stability for the appliance prior to any work on or with the appliance to prevent accidents damage.**
- f) **The water jet that is emitted from the high-pressure nozzle results in a repulsion power acting on the hand spray gun. Make sure that you have a firm footing and are also holding the hand spray gun and spray lance firmly.**
- g) **Never leave the appliance unattended as long as it is in operation.**

⚠ Attention

In case of extended breaks, switch the appliance off at the main switch or pull the mains plug.

Do not operate the appliance at temperatures below 0°C

Other risks

⚠ Danger!

- a) **The appliance may not be operating in explosive atmospheres.**
- b) **Risk of explosion- Do not spray flammable liquids.**
- c) **Never draw in fluids containing solvents or undiluted acids and solvents! This includes petrol, paint thinner and heating oil. The spray mist is highly inflammable, explosive and poisonous. Do not use acetone, undiluted acids and solvents, as they corrode the materials used on the appliance.**
- d) **Never use the product with inflammable or toxic liquids, or liquids with characteristics incompatible with its proper operation.**

- e) **Keep packaging films away from children, there is a risk of suffocation!**

⚠ Warning!

- a) **According to applicable regulations, the appliance must never be used on the drinking water net without a system separator.** Ensure that the connection of your building water installation on which the high-pressure cleaner is operated is equipped with a system separator pursuant
- b) **Water that has flown through backflow preventers is considered to be non-potable.**
- c) **High-pressure hoses, fittings and couplings are important for the safety of the appliance.** Only use high-pressure hoses, fittings and couplings recommended by the manufacturer.
- d) **To ensure applicable safety, use only original spare parts from the manufacturer or approved by the manufacturer.**
- e) **Switch the product off and disconnect it from the power supply removing the power plug from the socket outlet before assembly, cleaning, adjustments, maintenance, storage and transportation or converting the product to another function.**

⚠ Caution!

- a) **Mind the weight of the appliance when selecting the storage location and during transport to prevent accidents or injuries.**
- b) **Several hours of continuous use of the appliance can lead to numbness in the hands in rare cases.**
 - 1) Wear gloves.
 - 2) Keep hands warm.
 - 3) Take breaks at regular intervals. Working with detergent

⚠ Warning!

- a) **The improper use of detergents can cause severe injuries or oxidation.**
- b) **Store cleaning agent away from the reach of children.**
- c) **Discharge residual pressure before disconnecting the hose from the product.**
- d) **Check before each use, and at regular intervals, that all metal fasteners are tight and the product's components are in good condition; Inspect for broken or worn parts.**
- e) **Be aware of kick-back: Hold with Both Hands.**

Residual risks

Even if you are operating this product in accordance with all the safety requirements, potential risks of injury and damage remain. The following dangers can arise in connection with the structure and design of this product:

1. Health defects resulting from vibration emission if the product is being used over long periods of time or not adequately managed and properly maintained.
2. Danger of injury and property damage caused by flying objects.
3. Injuries and damage to property due to broken accessories or the sudden impact of hidden objects during use.

Safety devices

Caution!

Safety installations serve the protection of the user and may not be modified.

Power switch

The appliance switch prevents unintentional operation of the appliance.

Lock trigger gun

This lock locks the lever of the trigger gun and prevents the inadvertent start of the appliance. Overflow valve with water that has flowed through backflow preventers is considered to be non-potable.

Pressure switch

If the lever on the trigger gun is released the pressure switch turns off the pump, the high pressure jet is stopped. If the lever is pulled the pump is turned on again.

Motor protection switch

The motor protection switches off the device if the power consumption is high.

Personal protective equipment

Caution!

Wear protective clothing and safety goggles to protect against splash back containing water or dirt.

During the use of high-pressure cleaners' aerosols can develop. Inhaling aerosols can cause health damage.

—Depending on the application, completely shielded nozzles (e.g., surface cleaner) that significantly reduce the emission of aqueous aerosols can be used for high-pressure cleaning.

—The use of such shielding is not possible with all applications.

THE SYMBOLS IN INSTRUCTION MANUAL

	Read the instruction manual before using.
	Double insulated for additional protection.
	Safety alert. Please only use the accessories supported by the manufacturer.
	Wear safety glasses, hearing protection and dust mask.
	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.
	The appliance must not be directly connected to the public drinking water network.
	Sound power level is 95dB(A)
	The high pressure jet must not be directed at persons, animals, live electrical equipment or at the appliance itself.

ADDITIONAL SAFETY WARNING

This high-pressure cleaner is designated with a rated input current. The intended use of this product covers the cleaning of vehicles, buildings, terraces, facades and garden equipment using clean water and biodegradable chemical detergents. Likewise, the product can be used to clean paving slabs or rain gutters.

This product may not be used to clean clothing, shoes and other textiles. The water jet should not be directed against persons. Animals, any electrical equipment or on the product itself. Do not flush any objects which contain health hazardous materials. The product must not be run with inflammable, explosive and toxic liquids.

For safety reasons it is essential to read the entire instruction manual before first operation and to observe all the instructions there in.

 
INTENDED USE

Use this pressure washer for private households only.

The user bears sole responsibility for any damage caused by inappropriate use.

Generally accepted accident prevention regulations and the enclosed safety information must be observed.

SPECIFICATIONS

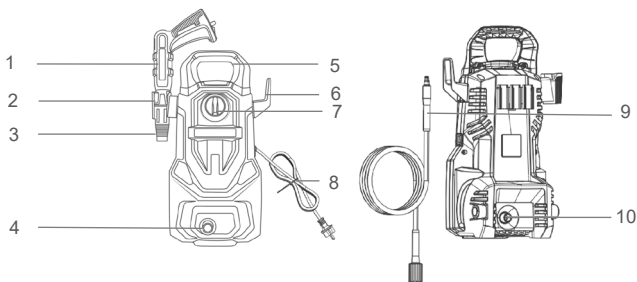

- | | |
|-----------------------|-----------------------|
| 1. Trigger gun | 6. Holder |
| 2. Trigger gun holder | 7. Adjust switch |
| 3. Spray wand | 8. Power cord |
| 4. Water inlet | 9. High pressure hose |
| 5. Handle | 10. Water outlet |

Technical specifications

Model No.	JDHP3A14 JDHP3A14xy	UJDHP3A14 UJDHP3A14xy
Voltage	220-240V~	110-120V~
Frequency	50/60Hz	60Hz
Watt	1400W	1400W
Protection class	II	II
Degree of protection	IPX5	IPX5
Rated pressure	75Bar(1085psi)	75Bar(1085psi)
Allowable pressure	110Bar(1595psi)	110Bar(1595psi)
Rated flow	5.6L/min	5.6L/min
Max. flow	7.5L/min	7.5L/min
Max. inlet pressure	0.7MPa	0.7MPa
Sound pressure level Uncertainty	LpA=77dB(A) KpA=3dB	LpA=77dB(A) KpA=3dB
Sound power level Uncertainty	LwA=89dB (A)	LwA=89dB (A)
Vibration value	$\alpha_h=2.1\text{m/s}^2$ $K\alpha_h=1.5\text{m/s}^2$	$\alpha_h=2.1\text{m/s}^2$ $K\alpha_h=1.5\text{m/s}^2$
Weight	5.6Kg	5.6Kg

 
 
 
 
 
 
Model No. NOTE: x(blank, 1,2,3,4,5,6,7,8,9,E,S,A,M)

y(blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

Accessories

A choice of accessories is supplied in the scope of the delivery of this product. Please check the technical specification of any accessories that you purchase to ensure they are compatible with this product.

OPERATION PICTURE

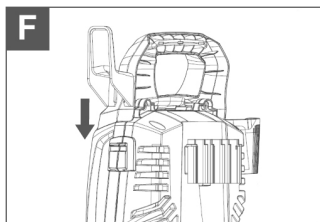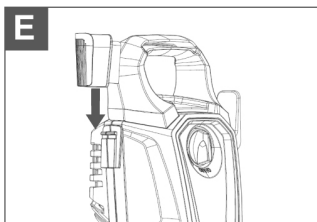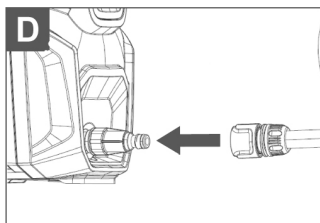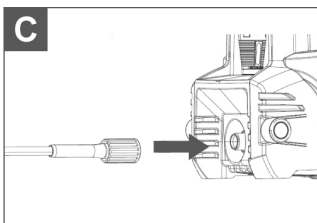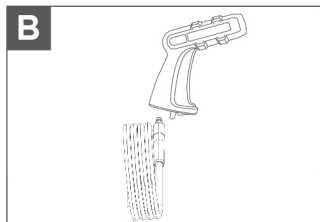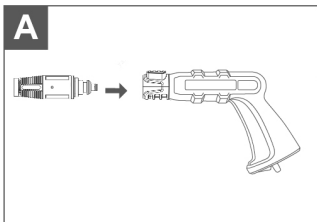

OPERATION

Mount loose parts delivered with appliance prior to start-up

Installing the spray nozzle. (see Figure A)

Connect the high-pressure hose to the trigger gun. (see Figure B)

Connect the high-pressure hose to the water outlet. (see Figure C)

Connect the garden hose to the water inlet. (see Figure D)

Connect the garden hose adaptor (female coupler) to the water inlet of the pressure washer, then thread your garden hose (male end) into the garden hose adaptor.

Slide the trigger gun holder into position of unit left. (see Figure E)

Slide the power cord hook into position of unit right. (see Figure F)

Warranty

1. This warranty does not apply to: O-rings, seals, valves, nozzles, filters, damages to high pressure hose, gun, pump, motor, housing shells due to misuse, operation errors, or exposure to natural elements.
2. Transportation damages after sales.
3. Accessories and spare parts, if any, provided in the package.
4. Damage resulted from commercial or industrial use, as this product is intended for DIY use only.

MAINTENANCE&MALFUNCTIONS

Danger risk of electric shock.

Turn off the appliance and remove the main plug prior to performing any care and maintenance work. Repair work and work on the electrical components may not only be performed by an authorized customer service. You can rectify minor faults yourself with the help of the following overview. If in doubt, please consult the authorized customer service.

Symptom	Cause	Recommended action
Machine refuses to start	- Machine not plugged in - Defective socket - Fuse has blown - Defective extension cord	Disconnect the machine from the mains and contact a qualified specialist.
Fluctuating pressure	- Pump sucking air - Valves dirty, worn out or stuck - Pump seals worn out	Check that hoses and connections are airtight. Clean and replace or refer to local distributor Clean and replace or refer to local distributor
Machine stops	- Incorrect mains voltage - Thermal sensor activated - Nozzle partially blocked	Check that the mains voltage corresponds to specification on the model tag. Leave the washer for 5 minutes to cool down. Clean the nozzle
Machine pulsating	- Air in inlet hose - Inadequate supply of mains water - Nozzle partially blocked - Water filter blocked - Hose kinked	Allow machine to run with open trigger until regular working pressure resumes. Check that the water supply corresponds to specifications required NB! Avoid using long, thin hoses (min. 1/2"). Clean the nozzle /Clean the filter Straighten out hose.
Machine starts, but no water comes out	- Pump/hoses or accessory frozen - No water supplies - Water filter blocked /Nozzle blocked	Wait for pump/hoses or accessory to thaw. Connect inlet water. Clean the filter /Clean the nozzle



   **Jadevermall**
www.jadevermall.com

KEYWAY TECHNOLOGY (NANTONG) CO., LTD
No.99, Gugang Road, Chongchuan District,
Nantong City, China
MADE IN CHINA 0624.J02



PAP