



说明书材质要求：105g 有光铜版纸

说明书成品尺寸：43*128mm



Pantone 137C



Black (两色印刷)

折叠方式：风琴折

特别注意：此页内容不印刷

风琴折 + 对折 页面顺序

16P 页面顺序

9	10	11	封面
12	13	14	封底

1	2	3	4
5	6	7	8

20P 页面顺序

11	12	13	14	封面
15	16	17	18	封底

1	2	3	4	5
6	7	8	9	10

更改记录	1. 新版式			1. 改参数		
	0323.V07	2023.03.21	Kitty	0324.V08	2024.03.01	YJJ
	版本号	日期	设计师	版本号	日期	设计师
更改记录	1. 加EN60335-1 安规条款 2. 改彩印					
	1224.V08	2024.12.21	Athena			
	版本号	日期	设计师			

ingco

www.ingco.com

PRODUCT MANUAL

GLUE GUN



GG148 GG148xy UGG148

x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M)

**y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,
A,M)**

SAFETY WARNING

WARNING!

Do not open the casing! Dangerous voltage is found unprotected on some components inside the product's casing; contact with these may lead to electric shock.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The product may only be repaired by qualified service personnel.
- The product may not be taken apart nor be changed.
- Do not place the product so

that it may fall into water or another liquid.

- Do not put any items containing water on the product, for example a flower vase or a soda can.
- Disconnect the plug when the Glue Gun is not in use; let it cool off before storage.
- Check that the voltage that is indicated on the mark sign corresponds with the local power grid voltage.
- The Glue Gun is not a toy, do not let children use it without supervision!
- Never leave the Glue Gun unattended when it is turned on.
- The Glue Gun is made for indoor usage; protect it from water and dampness.

The following safety precautions shall be followed to avoid the risk of fire:

- Be careful when you use the Glue Gun in spaces with inflammable material.
- Do not hold the Glue Gun over the same spot for a long time.
- Do not use the Glue Gun in

explosive environments.

- Keep in mind that the heat can conduct to inflammable material that is out of sight.
- Place the Glue Gun on the holder after use and let it cool off before storage.
- Do not leave the Glue Gun unattended when the cord is connected to the wall socket.



WARNING!

The glue is very hot during usage. It may cause burns on the skin.

Rinse immediately with cold water.

INTENDED USE

You can use the glue gun to glue the following materials: wood, plastics, textiles, cardboard, ceramics, leather, etc.

The equipment is to be used only for its prescribed purpose.

SPECIFICATIONS



Components

- | | |
|-----------|--------------|
| 1.Nozzle | 3.Glue stick |
| 2.Trigger | 4.Cable |

Technical specifications

Model No.	GG148 GG148xy
Voltage	220-240V
Frequency	50/60Hz
Electricity consumption	20W (Max100W)
Diameter glue stick	Ø11.2mm
Gluing capacity	15-22g/min

Model No. NOTE: x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M); y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

- Due to our continuing program of research and development, the specifications herein are subject to change without notice.

Technical specifications



Model No.	UGG148
Voltage	110-120V
Frequency	50/60Hz
Electricity consumption	20W (Max.100W)
Diameter glue stick	Ø11.2mm (7/16")
Gluing capacity	15-22g/min

Model No. Note:

x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M);

y (blank,-1,-2,-3,-4,-5,-6,-7,-8,-9,E,
S,A,M)

OPERATION PICTURE

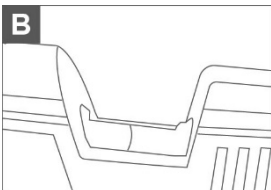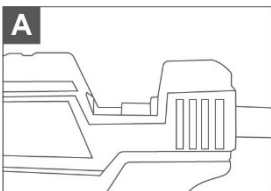

OPERATION

Usage

- a) Connect the plug to the wall socket.
- b) Place a glue stick in the opening on the back of the gun as indicated in the picture.
- c) Push in the glue stick as far as possible.
- d) Press the trigger several times to feed the glue stick forward.
- e) Press the trigger to feed the glue forward when it has started to melt.
- f) Apply melted glue on the surfaces to be joined together, and then press the glued surfaces together for 15 seconds.
- g) Unplug the plug after usage.

Disposal

Follow local ordinances when disposing of this product.

If you are unsure about how to dispose of this product contact your municipality.

NOTE: When the glue stick will be used up, the glue gun can't work regularly, because the

trigger can't push the glue stick
(see Figure A)

At this time, you should place a
new one stick, so the new stick
can push the former one, the
glue gun will work regularly
(see Figure B)



www.ingco.com MADE IN CHINA 1224.V09
NEWWAY TECHNOLOGY (SUZHOU) CO., LIMITED