



说明书材质要求: 105g 有光铜版纸	说明书成品尺寸: 105*143mm
第一: 专色用6级防晒油墨+CMYK油墨要求: 1. PANTONE137C专色油墨 (专色用6级防晒油墨): 如果自己配色, 油墨配比为: 酒联中黄 (防晒) 2000g 酒联金红 (防晒) 225g 2. C色油墨: 酒联天蓝墨 3. M色油墨: 酒联金红墨 4. Y色油墨: pantone123C专色油墨 5. K色油墨: 酒联黑墨	第二: 特别注意: 1. 印刷时看样请参考我司提供的实物样品颜色。不得偏色 2. 137C的专色 不得 参考C=0, M=35, Y=90, K=0对应的四色 色谱颜色来看样印刷 Pantone 137C Black (两色印刷)
折叠方式: 风琴折 (20P以下用风琴折) / 骑马钉 (20P以上用骑马钉) 特殊情况: 16P/20P: 风琴折 + 对折	备注:

特别注意: 此页内容不印刷

风琴折 + 对折 页面顺序

16P 页面顺序

9	10	11	封面
12	13	14	封底

1	2	3	4
5	6	7	8

20P 页面顺序

11	12	13	14	封面
15	16	17	18	封底

1	2	3	4	5
6	7	8	9	10

 
更改记录	1. 新制作			1. 第10页 INTENDED USE 改为 The tool is intended for polishing		
	0125.V01	2025.1.7	LYD	1025.V02	2025.10.28	RHX
	版本号	日期	设计师	版本号	日期	设计师

INGCO

www.ingco.com

**PRODUCT
MANUAL**

CORDLESS POLISHER

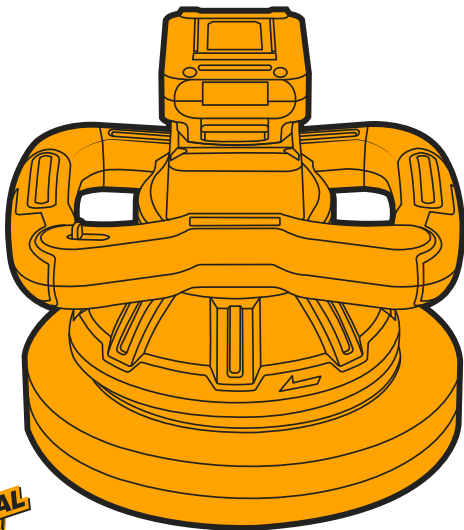

COPLI202548 UCOPLI202548
COPLI202548xy UCOPLI202548xy
x(blank,1,2,3,4,5,6,7,8,9,E,S,A,M)
y(blank,-1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)



SCAN FOR VIDEO

GENERAL POWER TOOL SAFETY WARNINGS

⚠ WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*
- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*

- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
- f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.**
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*

5) Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- b) **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may*

cause irritation or burns.

- e) **Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*
- f) **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*
- g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

6) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
- b) **Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorized service providers*

BATTERY SAFETY WARNINGS

Save these instructions.

⚠ CAUTION!

Only use genuine original batteries. *Use of non-genuine batteries, or batteries that have been altered, may result in the battery bursting causing fires, personal injury, and damage. It will also void the warranty for the tool and charged and dark areas invite accidents.*

⚠ WARNING!

- a) **Do not dismantle, open or shred secondary cells or batteries.**
- b) **Keep batteries out of the reach of children.** *Battery usage by children should be supervised. Especially keep small batteries out of reach of small children.*
- c) **Seek medical advice immediately if a cell or a battery has been swallowed.**
- d) **Do not expose cells or batteries to heat or fire.** *Avoid storage in direct sunlight.*
- e) **Do not short-circuit a cell or a battery.** *Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.*
- f) **Do not remove a cell or battery from its original packaging until required for use.**
- g) **Do not subject cells or batteries to mechanical shock.**
- h) **In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes.** *If contact has been made, wash the affected area with copious amounts of water and seek medical advice.*
- i) **Do not use any charger other than that specifically provided for use with the equipment.**
- j) **Observe the plus (+) and minus (-) marks on the cell, battery and equipment and ensure correct use.**
- k) **Do not use any cell or battery which is not designed for use with the equipment.**
- l) **Do not mix cells of different manufacture, capacity, size or type within a device.**
- m) **Always purchase the battery recommended by the device manufacturer for the equipment.**

- n) **Keep cells and batteries clean and dry.**
- o) **Wipe the cell or battery terminals with a clean dry cloth if they become dirty.**
- p) **Secondary cells and batteries need to be charged before use.** *Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.*
- q) **Do not leave a battery on prolonged charge when not in use.**
- r) **After extended periods of storage, it may be necessary to charge and discharge the cells or batteries times to obtain maximum performance.**
- s) **Retain the original product literature for future reference.**
- t) **Use the cell or battery only in the application for which it was intended.**
- u) **When possible, remove the battery from the equipment when not in use.**
- v) **Dispose of properly.**

Tips for maintaining maximum battery life

- a) **Charge the battery cartridge before completely discharged.** *Always stop tool operation and charge the battery cartridge when you notice less tool power.*
- b) **Never recharge a fully charged battery cartridge.** *Overcharging shortens the battery service life.*
- c) **Charge the battery cartridge with room temperature at 10°C-40°C (50°F-104°F).** *Let a hot battery cartridge cool down before charging it.*
- d) **Charge the battery cartridge if you do not use it for a long period (more than six months).**

Important safety instructions for battery cartridge

- a) **Before using battery cartridge, read all instructions and cautionary markings on battery charger, battery, and) product using battery.**
- b) **Do not disassemble battery cartridge.**
- c) **If operating time has become excessively shorter, stop operating immediately.** *It may result in a risk of overheating, possible burns and even an explosion.*
- d) **If electrolyte gets into your eyes, rinse them out with clear water and seek medical attention right away.** *It may result in loss of your eyesight.*
- e) **Do not short the battery cartridge:**

- *Do not touch the terminals with any conductive material.*
 - *Avoid storing battery cartridge in a container with other metal objects such as nails, coins, etc.*
 - *Do not expose battery cartridge to water or rain.*
 - *A battery short can cause a large current flow, overheating, possible burns and even a breakdown.*
- f) **Do not store the tool and battery cartridge in locations where the temperature may reach or exceed 50°C (122°F).**
 - g) **Do not incinerate the battery cartridge even if it is severely damaged or is completely worn out. *The battery cartridge can explode in a fire.***
 - h) **Be careful not to drop or strike battery.**
 - i) **Do not use a damaged battery.**
 - j) **Follow your local regulations relating to disposal of battery.**

Tool / battery protection system

The tool is equipped with a tool/battery protection system. This system automatically cuts off power to the motor to extend tool and battery life. The tool will automatically stop during operation if the tool or battery is placed under one of the following conditions:

Overload protection

When the battery is operated in a manner that causes it to draw an abnormally high current, the tool automatically stops without any indication. In this situation, turn the tool off and stop the application that caused the tool to become overloaded. Then turn the tool on to restart.

Overheat protection

When the tool/battery is overheated, the tool stops automatically. In this situation, let the tool/battery cool before turning the tool on again.

Transportation

Batteries comply with all applicable shipping regulations as prescribed by industry and legal standards (for more information, check with the manufacturer).

Transporting batteries can possibly cause fire if the battery terminals inadvertently come in contact with conductive materials. When transporting batteries, make sure that the battery terminals are protected and well insulated from materials that could contact them and cause a short circuit.

The information provided in this section of the manual is provided in good faith and believed to be accurate at the time the document was created. However, no warranty, expressed or implied, is given. It is the buyer's responsibility to ensure that its activities comply with the applicable regulations.

Protecting the environment

Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.

Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Rechargeable battery pack

This long-life battery pack must be recharged when it fails to produce sufficient power on jobs which were easily done before. At the end of its technical life, discard it with due care for our environment:

- Run the battery pack down completely, then remove it from the tool.
- Lithium-ion cells are recyclable. Take them to your dealer or a local recycling station. The collected battery packs will be recycled or disposed of properly.

THE SYMBOLS IN INSTRUCTION MANUAL

	Read the instruction manual before using
	CE conformity.
	Safety alert. Please only use the accessories supported by the manufacturer.
	Wear safety glasses, hearing protection and dust mask.
	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.
	Charging the battery only below 40°C
	Always recycle batteries.
	Do not destroy battery by fire.
	Do not expose battery to water

ADDITIONAL SAFETY WARNING

WARNING!

- Before installation, replacement or removal of accessories, make sure that the battery is disconnected from the tool and that the switch is locked.
- Safety measures to protect the operator, which are based on an assessment of exposure under actual conditions of use (including all parts of the work cycle, such as the time when the tool is switched off or idle and the activation time), must be specified.

The declared total vibration value has been measured using the standard test method and can be used to compare one tool to another. The declared total vibration value can be used in the initial exposure assessment.

CAUTION!

The vibration emission during tool operation may differ from the declared value, depending on the way the tool is used.

THE TOOL IS INTENDED FOR POLISHING

The cordless polisher is a universal, portable tool which does not require an external power source, designed for DIY enthusiasts to polish and grind surfaces made of different materials with abrasive paper. Its specific advantages will be appreciated by DIY enthusiasts performing various assembly and finishing works.

Technical specifications

Model No.	COPLI202548 COPLI202548xy	UCOPLI202548 UCOPLI202548xy
Voltage	20V	
Max. mixing paddle dia.	254mm	10"
Mixing pad thread	IPX0	

Model No. Note: x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M); y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

- Due to our continuing program of research and development, the specifications herein are subject to change without notice.
- Specifications and battery cartridge may differ from country to country.

⚠ WARNING!

Only use original battery pack and battery charger as below for this power tool:

Product	Battery pack		
Model No.	Type	Rated voltage	Rated capacity
FBLI2001 FBLI2001xy	Lithium-Ion	18.5V d.c., 20V Max	2.0Ah
FBLI2002 FBLI2002xy			4.0Ah
FBLI2003 FBLI2003xy			5.0Ah


Model No. NOTE: x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M); y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

Product	Battery pack charger			
Model No.	Input power	Input voltage	Output rated voltage	Output rated current
FCLI2001 FCLI2001xy	50W	220-240V ~50/60Hz	20V d.c.	2A
FCLI2001-9		100-240V ~50/60Hz		
UFCLI2001 UFCLI2001xy		110-120V ~50/60Hz		
FCLI20411 FCLI20411xy FCLI2034 FCLI2034xy	105W	220-240V ~50/60Hz	21V d.c.	4A
FCLI20411-9 FCLI2034-9		100-240V ~50/60Hz		
UFCLI20411 UFCLI20411xy UFCLI2034 UFCLI2034xy		110-120V ~50/60Hz		

Model No. NOTE: x (blank, 1,2,3,4,5,6,7,8,9,E,S,A,M); y (blank, -1,-2,-3,-4,-5,-6,-7,-8,-9,E,S,A,M)

OPERATION PICTURE

 
A

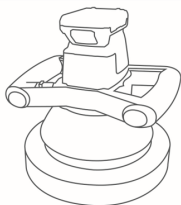

B



 C

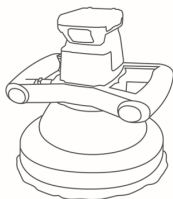

OPERATION

Pre-operation Preparation and Start/Stop Procedures for Polisher

- a) Make sure the battery has been disconnected from the tool.
- b) Check the polishing disc for damage. If any cracks, scratches or other damage are visible, replace the disc with a new one free of these defects. It is forbidden to work with damaged discs!
- c) Install the additional handle and the polishing disc.
- d) Select the type of polishing pad appropriate for the type of work.
- e) Wear eye protection, hearing protection and work gloves.
- f) Check that the switch is in the "OFF" position and is locked - it cannot be pressed.
- g) Connect the battery to the tool.
- h) Adopt an appropriate posture which guarantees keeping the balance, start the tool by moving the switch to the "ON" position – "I". The tool is stopped by turning the switch to the "OFF" position – "O".

Installation of polishing pads (see Figure A, B, C)

The polishing disc has a Velcro, which allows the attachment of polishing pads, covers and polishing sponges with a special surface which can be attached to the Velcro of the disc. The pads should be attached concentrically, do not allow the surface of the Velcro disc to come into contact with the polished surface. This can damage both the disc and the polished surface. (see FigureA)

It is forbidden to modify the socket and/or battery to match them.

Slide the charged battery into the guides of the battery socket so that the battery latch holds it in place (see Figure B). Check whether the battery does not slide out of the tool socket by itself.

After installing the battery, the tool is ready to work. (see Figure C)

CAUTION!

- **Start work by gently applying the working overlay to the material being processed.**
- **While working, do not exert too much pressure on the treated surface. Move the tool with smooth movements to and from you.**

- **Observe the effects of work and adjust the pressure of the polishing disc. Avoid working in one place for too long, it may lead to local overheating of the polished material and lead to uneven work results.**
- **When using polishing agents, read the documentation supplied with them before starting work.**
- **Do not overload the polisher, the temperature of the external surface must never exceed 60°C. After releasing the switch, the disc will keep spinning for some time.**
- **Do not put the polisher away until the disc has come to a complete standstill.**

MAINTENANCE&MALFUNCTIONS

Possible malfunctions and methods of their eliminations


Malfunction	Probable causes	Actions
When the machine is turned on, the electric motor does not work.	● Switch failure ● The power cord or wiring is broken, power cord plug malfunction; ● No brush contact with the collector; ● Wear/damage of brushes	Disconnect the machine from the mains and contact a qualified specialist.
Formation of a circular fire on the collector	● Brush wear/damage of the brush holder; ● Malfunction in the armature coil	Disconnect the machine from the mains and contact a qualified specialist. Please don't repair the machine by your own.
When working, smoke or the smell of burning insulation appears from the ventilation openings.	● Malfunction in the electric motor coil; ● Malfunction of the electrical part of the tool.	
Increased noise in the gearbox	● Wear/breakage of gears or bearings	
When the machine is turned on, the spindle does not rotate	● Gearbox failure.	

Critical state criteria

Critical state criteria	Probable causes	Actions
Cracks on the surfaces of bearing and housing parts	Fatigue deformation of metal	Disconnect the machine from the mains and contact a qualified specialist. Please don't repair the machine by your own.
The power cord or plug is damaged	Overload or breakage	
Excessive wear or damage to the motor or reductor mechanism, or a combination of signs	Fatigue deformation of metal	

Critical state criteria

List of critical failures	Actions
Electric motor sparking	It is necessary to contact a qualified specialist
The appearance of extraneous noise	It is necessary to contact a qualified specialist
If the above malfunctions are detected, it is necessary to disconnect the machine from the mains and contact a qualified specialist	

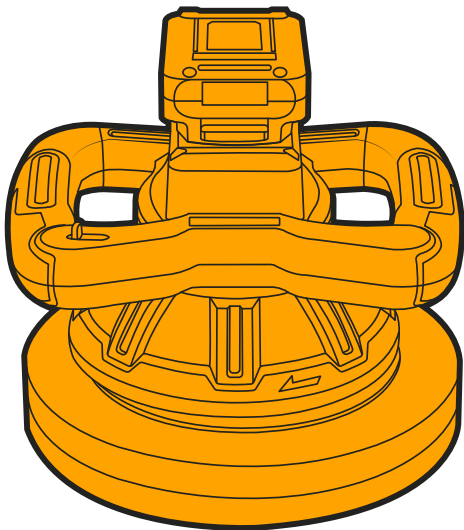 

MADE IN CHINA 1025.V02



INGCO Global

www.ingco.com

NEUWAY TECHNOLOGY (SUZHOU) CO., LIMITED

No. 20 Dagang Road, Fuqiao Town, Taicang City, China