



说明书材质要求: 105g 有光铜版纸	说明书成品尺寸: 105x143mm
第一: 专色+CMYK油墨要求: 1. TOTAL专色油墨, 见实物色样调整 2. C色油墨: 泗联天蓝墨 3. M色油墨: 泗联洋红墨 4. Y色油墨: 泗联中黄墨 5. K色油墨: 泗联黑墨	第二: 特别注意: 1. 印刷时看样颜色请参考我司提供的实物样品颜色, 不得偏色。 2. 322C的专色不得参考C=100, M=28.42, Y=48.29, K=21.6 对应的四色色谱颜色来看样印刷 ■ Black (单色印刷)
折叠方式: 骑马钉 (20P以上 用骑马钉)	备注:

特别注意: 此页内容不印刷

风琴折 + 对折 页面顺序

16P 页面顺序

9	10	11	封面
12	13	14	封底
1	2	3	4
5	6	7	8

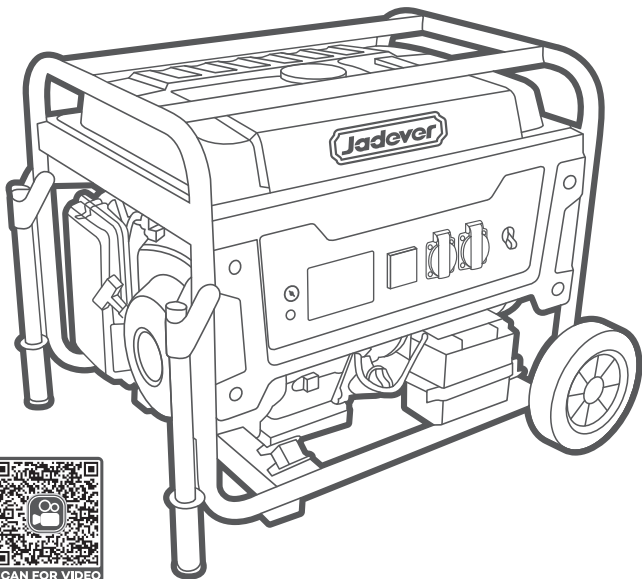
20P 页面顺序

11	12	13	14	封面
15	16	17	18	封底
1	2	3	4	5
6	7	8	9	10

更改记录	1. 新做			1. 增加货号 JDGEAA08-58 JDGEAA09-58			
	0723.J01	2023.7.3	ZRR	0324.J02	2024.03.06	ZY	
	版本号	日期	设计师	版本号	日期	设计师	

Jadever

GASOLINE GENERATOR



JDGEAA08 JDGEAA09 JDGEAA10
UJDGEAA08 UJDGEAA09 UJDGEAA10
JDGEAA08x JDGEAA09x JDGEAA10x
x(-4,-5,-58,-6,-8,-9,s)

**PRODUCT
MANUAL**

GENERAL SAFETY WARNINGS** DANGER****Electrocution hazard - Electricity can cause DEATH or SERIOUS INJURY**

- Do not use bare wire to connect power supply to electrical equipment, use a plug that meets local regulations.
- During generator operation, do not touch exposed wires.
- During generator operation, keep children a safe distance from the generator unit.
- Do not use the generator unless it is fully assembled as instructed in this manual.
- Properly ground the generator and verify grounding is in place before each use. Grounding regulations vary by location, consult a qualified electrician for verification.
- Accessories including cables and plug must not be defective. Electric shock prevention hinges on the breaker. If you renew the breaker, use a breaker with the same rating and performance features, contact your local authorized service agent.

** DANGER****Fuel used by the generator is combustible, as this equipment generates high temperature, this causes a fire risk in some circumstances, such as refueling.**

- It is strictly prohibited to add fuel while the generator is operating;
- When adding fuel, keep far away from any ignition source, and NO smoking;
- When adding fuel, pay attention not to spill fuel on the equipment, if fuel is spilled clean it immediately, and only start it up when the spilled fuel has evaporated completely;
- During operation, be sure there are no combustibles within a 2m range.
- In case of long-term nonuse, make sure you use a fuel stabilizer or empty the fuel tank and bowl.

Electronic safe

Please do not keep emergency keys in your safe!

Dear valued customer:

Thank you for choosing our products! You've taken an important Step in organizing and protecting your most valued possessions. Every series of our safes is

professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages. Again, thank you for choosing our products!

⚠ DANGER

This equipment contains high speed revolving parts, which may cause injury.

- During generator operation, avoid coming into contact with any revolving parts.
- During generator operation, observe surroundings, make sure there is no risk to the generator, other people and nearby equipment.
- During generator operation, do not lift or re-position. Turn the generator off ensuring it has come to a complete stop.

⚠ ATTENTION

Operating requirements.

- Do not place weight on the equipment.
- The wheel is adopted for convenience of equipment moving, do not use it in long distance, otherwise it will be damaged.
- Do not exceed rating power of the equipment in operation; otherwise, its service life will be shortened. Power of common household appliances is shown on maintain page in details.
- Maintain the equipment based on requirements so as to prolong its service life, refer to maintain page for details.
- Operate and store the generator in a dust free area this prevents dust entering inside of the equipment which reduces its working life.

THE SYMBOLS IN INSTRUCTION MANUAL

Some of following symbols are used in the machine or the manual. To understand their meanings will make it easy and safe for you in operation.

Symbol	Name	Meaning
V	Volt	Voltage unit
A	Ampere	Current unit
Hz	Hertz	Frequency unit (1Hz=60 r/min)
W	Watt	Power unit
RPM	Revolution per minute	Speed unit
PF	Power factor	Generator efficiency
G1	Performance rate	Performance rate
	Read Instructions	Read Instructions
	CE conformity.	
	Electrocution risk	Indicate that there is an electrified body here, pay attention to safety.
	Electric Shock	This is an electric device, failure to observe the indication may result in an electric shock.
	Safety Warning	Risk of harm in the case of not following instructions.
	Electricity, Do Not Touch	The device produces electricity, do not touch during operation.
	Fire	High temperature generated from operation may cause fire, so operate it with caution.

	Explosion	If the fuel tank is exposed to high temperature or open fire it may explode.
	Fuel	Fuel symbol.
	Grounding	Consult an electrician to determine grounding. Make sure the generator is safely grounded before operation.
	Water exposure	Do not use a plug or electric device on rainy days or if they are wet.
	Engine oil	Engine oil symbol and the specification is based on maintain page.

ADDITIONAL SAFETY WARNING** DANGER**

Use outdoors only, exhaust gas released from the equipment contains Carbon Monoxide (CO), which cannot be seen or smelt. Excessive inhalation of CO may cause a loss of consciousness and may claim life in extreme circumstances.

** WARNING**

Keep the generator clean, remove any gasoline or oil spills on or around the generator.

** WARNING**

Do not use this generator if exposed to rain or if wet, and store in an enclosed area when not in use.

** DANGER**

Do not connect the generator unit with mains supply or other power sources, use it alone.

** WARNING**

Properly ground the generator and verify grounding is in place before each use.

** WARNING**

DO NOT touch HOT surface or you may be injured or suffer burns.

There is the warning decal on the machine to remind you of the safety regulations.

⚠ WARNING



You will be killed or seriously hurt if you do not follow the operator's manual instructions.



Generator is a potential source of electric shock. Do not expose to moisture, rain, or snow. Do not operate with wet hands or feet.



Failure to properly ground generator can result in electrocution, especially if the generator is equipped with a wheel kit.



Exhaust contains poisonous carbon monoxide gas that can cause unconsciousness or DEATH. Operate in well ventilated, outdoor areas away from open windows or doors.

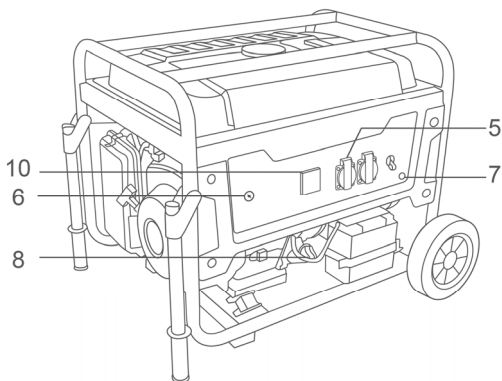
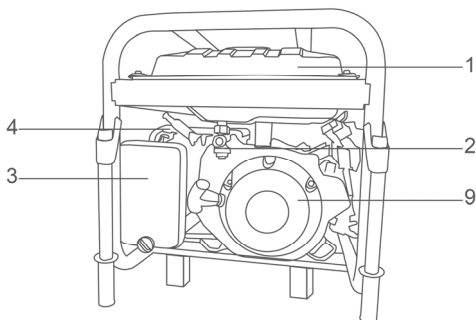


Risk of fire. Do not add fuel while the product is operating.



Do not expose to rain or use in damp locations.

SPECIFICATIONS



- 1. Fuel tank
- 2. Fuel valve
- 3. Air filter cover
- 4. Choke lever
- 5. AC socket

- 6. Key switch
- 7. Ground (earth) terminal
- 8. Oil filter cap
- 9. Recoil starter
- 10. Voltmeter

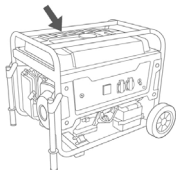
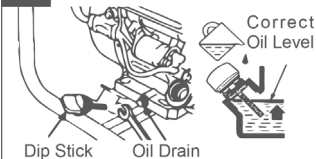
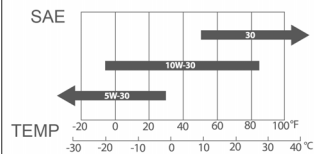
Technical specifications

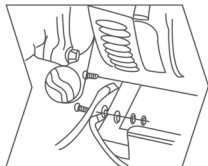
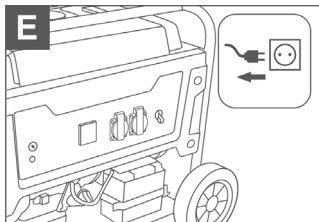
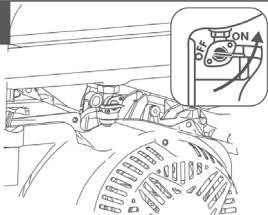
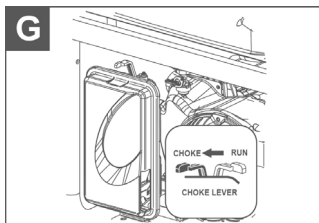
Model No.	JDGEAA08 JDGEAA08-4 JDGEAA08-6 JDGEAA08-8 JDGEAA08-9 JDGEAA08S	JDGEAA08-5 JDGEAA08-58	UJDGEAA08
Rated AC voltage	220-240V~	220-240V~	110-120/220-240V~
Rated frequency	50Hz	60Hz	60Hz
Phase	Single	Single	Single
Max.AC output	5.5kW	6.5kW	6.5kW
Rated AC output	5kW	5.5kW	5.5kW
Max.AC current	23.9 A	28.3 A	54.1/28.2A
Rated AC current	21.7 A	23.9 A	45.8/23.9 A
Voltage regulation	AVR	AVR	AVR
Engine max. output	15HP, 3000/min	15HP, 3600/min	15HP, 3600/min
Displacement	420 cc	420 cc	420 cc
Cooling system	Air-cooled	Air-cooled	Air-cooled
Starting system	Electric+Recoil	Electric+Recoil	Electric+Recoil
Fuel tank capacity	25 L	25 L	25 L
Continuous operation hours	9	9	9
Rated power factor	1	1	1
Compression ratio	8:1	8:1	8:1
Fuel type	Automotive Unleaded Gasoline		
Direction of rotation	86 / 89kg		

Model No.	JDGEAA09 JDGEAA09-4 JDGEAA09-6 JDGEAA09-8 JDGEAA09-9 JDGEAA09S	JDGEAA09-5 JDGEAA09-58	UJDGEAA09
Rated AC voltage	220-240V~	220-240V~	110-120/220-240V~
Rated frequency	50Hz	60Hz	60Hz
Phase	Single	Single	Single
Max.AC output	7kW	7.5kW	7.5kW
Rated AC output	6kW	6.5kW	6.5kW
Max.AC current	30.4 A	32.6 A	62.5/32.6 A
Rated AC current	26 A	28.3 A	54.1/28.2 A
Voltage regulation	AVR	AVR	AVR
Engine max. output	15HP, 3000/min	15HP, 3600/min	15HP, 3600/min
Displacement	420 cc	420 cc	420 cc
Cooling system	Air-cooled	Air-cooled	Air-cooled
Starting system	Electric+Recoil	Electric+Recoil	Electric+Recoil
Fuel tank capacity	25 L	25 L	25 L
Continuous operation hours	9	9	9
Rated power factor	1	1	1
Compression ratio	8:1	8:1	8:1
Fuel type	Automotive Unleaded Gasoline		
Direction of rotation	88 / 91kg		

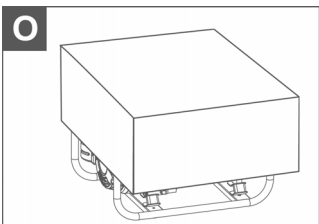
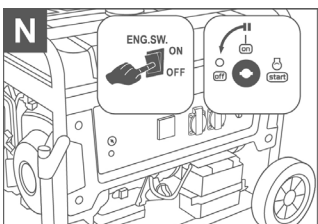
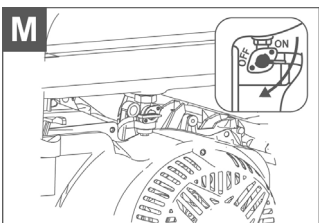
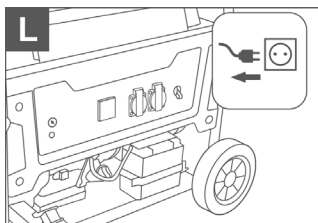
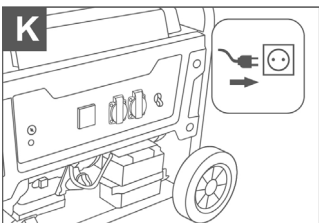
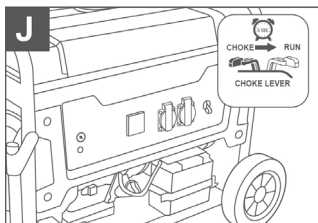
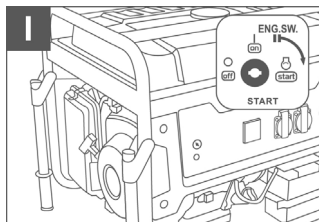
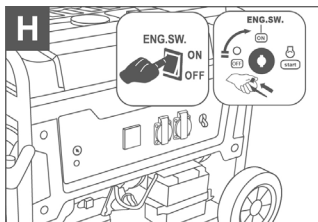
Model No.	JDGEAA10 JDGEAA10-4 JDGEAA10-6 JDGEAA10-8 JDGEAA10-9 JDGEAA10S	JDGEAA10-5 JDGEAA10-58	UJDGEAA10
Rated AC voltage	220-240V~	220-240V~	110-120/220-240V~
Rated frequency	50Hz	60Hz	60Hz
Phase	Single	Single	Single
Max.AC output	8.5kW	9.5kW	9.5kW
Rated AC output	7.5kW	8.5kW	8.5kW
Max.AC current	36.9 A	41.3 A	79.1/41.3 A
Rated AC current	32.6 A	36.9A	70.8/36.9 A
Voltage regulation	AVR	AVR	AVR
Engine max. output	18HP, 3000/min	18HP, 3600/min	18HP, 3600/min
Displacement	460 cc	460 cc	460 cc
Cooling system	Air-cooled	Air-cooled	Air-cooled
Starting system	Electric+Recoil	Electric+Recoil	Electric+Recoil
Fuel tank capacity	25 L	25 L	25 L
Continuous operation hours	9	9	9
Rated power factor	1	1	1
Compression ratio	8:1	8:1	8:1
Fuel type	Automotive Unleaded Gasoline		
Direction of rotation	90/ 93kg		

OPERATION PICTURE

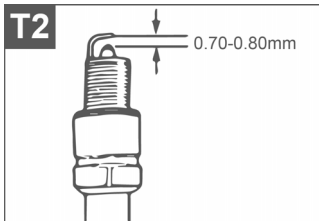
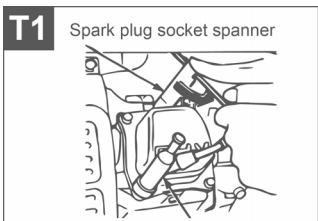
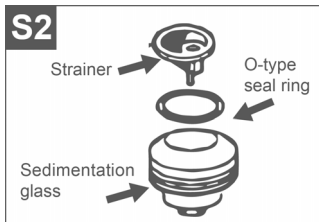
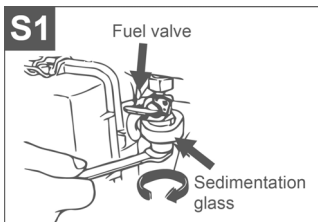
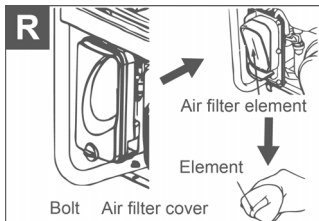
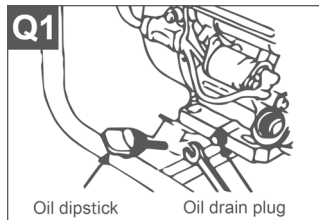
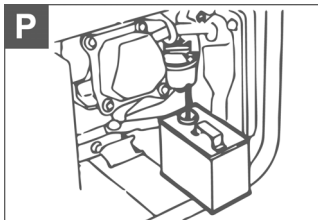
A

B1

B2

C

D

E

F

G


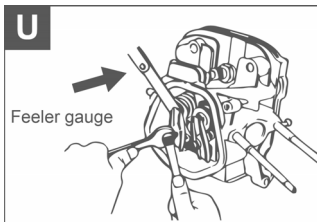
OPERATION PICTURE



OPERATION PICTURE



OPERATION PICTURE



OPERATION

Know your generator

The safe use of this generator requires an understanding of the information provided in this operator's manual as well as a knowledge of the project you are attempting. Before use of this generator, familiarize yourself with all operating features and safety rules.

Ac circuit breaker

The circuit breakers are provided to protect the generator against electrical overload. The circuit breaker may be reset by pressing the circuit breaker reset button.

Air filter

The air filter helps to limit the amount of dirt and dust drawn into the unit during operation.

Choke lever

The choke lever is used when starting the engine.

Fuel tank

The fuel tank has a capacity of 15 liters / 25 liters

Fuel valve

Fuel flow from the fuel tank to the engine is turned on and off using the fuel valve. Turn fuel off after use.

Ground terminal

The ground terminal is used to assist in properly grounding the generator to help protect against electrical shock. Consult with a qualified local electrician for grounding requirements in your area.

Low oil shut down protector

The low oil sensor causes the engine to stop if the level of oil in the crankcase is insufficient.

Oil cap/dipstick

Remove the oil fill cap to check and add oil to the generator when necessary.

Oil drain plug

When changing the engine oil, unscrew and remove the oil drain plug to allow old engine oil to be drained.

Recoil starter grip

The recoil starter grip is used to start the generator's engine manually.

Operating guide (see Figure A)

The operational steps are pasted above the fuel tank, please operate as per the instructions.

Unit grounding

Shift the machine outdoors, use the grounding terminal connection wire to ground to earth. One end of the wire is pressed below the butterfly nut on the unit, screw it up tightly, and the other end is connected with the metal rod that is inserted into the ground.

Pre-operational (see Figure B)

Add engine oil

Unscrew the oil dip stick, add engine oil SAE10W/30 (oil requirements may vary if operating in extreme temperatures, refer above table). Fill the oil to the top of the thread (indicated as "Correct Oil Level" above).

If oil is spilt wipe off machine to avoid fire hazard and from the ground to avoid slipping.

Fill fuel oil (see Figure C)

Open the fuel fill cap and fill with a Ethanol Free 91 octane gasoline (95 and 98 octane may be used). The fuel level position will be displayed on the indicator opposite the fuel cap. When filling the tank, the maximum fuel position shall not exceed the inner strainer of the Fuel tank as indicated above.

WARNING

keep away from any possible ignition source when filling gasoline; do not fill the fuel tank while the generator is in operation.

Connect electric battery (electrical starting only) (see Figure D)

Connect the battery, red for positive terminal and green for the negative terminal and make sure you tighten the nuts. Pay attention and avoid contact between positive and negative terminal to eliminate the chance of short circuit. Make sure you place the rubber protective covers over the terminals.

Starting the engine

1. Unplug all loads from the generator. (see Figure E)
2. Turn the Fuel valve to the ON position. (see Figure F)
3. Move the choke lever to the CHOKE position. (see Figure G)

⚠ WARNING

If engine has been operating and is being restarted leave the choke lever in the RUN position.

4. Turn the switch on the control panel to ON.

- a. For the manual start generator by pulling the recoil starting grip until the engine runs. (see Figure H)
- b. The generator unit is electric, start and can be started by turning the switch around to the START position. In order to extend the service life of the battery, do not turn the switch for more than 3 seconds and the interval between two attempts should be at least 10 seconds apart. (see Figure I)

⚠ WARNING

Do not allow the grip to snap back after starting; return it gently to its original place.

5. Allow the engine to run for 10-20 seconds, then move the choke lever to the RUN position. (see Figure J)
6. To operate electrical equipment, turn the circuit breaker ON. Please note that when using several appliances at the same time, do not add the next one unless the generator and other items are running normally. The total power of the loads should not exceed the rated power of the unit. (see Figure K)

Stopping the engine

Remove any load from the generator. (see Figure L)

Turn the fuel valve to the OFF position. (see Figure M)

Turn the engine switch to the OFF position. (see Figure N)

To stop the unit quickly in an emergency: Turn the engine switch to the OFF position.

⚠ WARNING

The surface temperature of the generator unit is still high after shutdown, and it should not be moved or touched before cooling down to avoid the possibility of burns.

The unit should be stored in a clean and dry place and should be protected from rain and high temperature. Covering the unit is recommended to avoid excessive exposure to moisture and dust. (see Figure O)

If the generator is not used regularly remove the fuel via the drainage bolt of the carburetor and drain the fuel tank. Then tighten the oil drainage bolt again. If a quality fuel stabilizer is used then this procedure can be ignored. (see Figure P)

Electric equipment			Rated power (W)	Starting power (W)
Household Appliances	Flat panel television 27"		500	800
	Energy saving lamp		5~50	5~50
	Electric cooker		1000	1000
	Computer		800	800
	DVD		100	100
	Refrigerator		800	1600
	Washing machine		300	600
	Electric fan		50	100
	Air-conditioner 2HP		1500	3000
Tools	Electric welder		2500	5000
	Electric hammer		1000	1500
	Water pump		800	1200

The starting wattage of some appliances can be higher than the operating watts. Please read the labels of the electric equipment for reference. The total power of the loads should not exceed the rated power of the generator.

Regular maintenance is the best guarantee of safe, economical and fault-free operation, and can also contribute to environmental protection.

Maintenance schedule is as follows- Please carry out the recommended maintenance at the earlier of the stated hours or elapsed time.

Schedule for regular maintenance		Peruse	Every 20 hours or in the first month of initial use (3)	Every 50 hours or every 3 months (3)	Every 100 hours or every 6 months (3)	Every 300 hours or every year (3)
Engine oil	Inspect the oil level	○				
	Replace		○		○	
Air filter	Inspect	○				
	Clean			○		
Fuel strainer bowl	Clean				○	
Spark plug	Clean				○	Replace
Valve clearance	Readjust					○
Cylinder head	Wash	Every 300 hours				
Fuel tank and strainer	Wash	Every 2 years				
Oil tube	Replace	Every 2 years				

Replace the engine oil (see Figure Q)

- 1) Maintenance should be conducted more frequently if the unit is used in dusty conditions.
- 2) Maintenance should be conducted by an authorized generator dealer (to find one see tpeaustralia.com.au/dealers).
- 3)

Clean the air filter (see Figure R)

The air cleaner system uses a foam element that can be washed and reused.

1. Open the cover with the lock nut and remove the foam air filter element.
2. Wash the foam element in liquid detergent and water, then rinse in clean water and squeeze dry in a clean cloth.
3. Saturate the foam filter with clean engine oil, remove excess by squeezing into a dry clean cloth.
4. Refit the air filter and air filter cover.

Clean the fuel bowl (see Figure S)

1. Close the fuel valve and remove the sediment bowl. Take out the O-type seal ring and strainer.
2. Clean the sediment bowl, O-type seal ring and strainer with incombustible or high-flash solvent.
3. Reinstall the O-type seal ring and strainer, and tighten the sediment bowl.
4. Open the fuel valve and inspect for leakage.

Clean the spark plug (see Figure T)

Recommended spark plug models: NGK: BPR7ES. Champion RN7YC.

1. Remove the spark plug cap.
2. Clean the spark plug base.
3. Remove the spark plug with the spark plug socket spanner.
4. Inspect the spark plug insulator visually for damage. If it is damaged, replace a new one.
5. Measure the spark plug clearance with a feeler gauge. The clearance should be kept between 0.70 and 0.80mm.
6. Inspect if the washer of the spark plug is in good condition.
7. Reinstall the spark plug and tighten it with the spark plug socket spanner. Press down the washer of the spark plug and place the spark plug cap.

Valve clearance (see Figure U)

(Should be conducted by a professional person)

Remove the cylinder cover and measure the valve clearance with the feeler gauge.

The clearances are 0.1mm for the inlet valve and 0.15mm for the outlet valve.

MAINTENANCE&MALFUNCTIONS

Possible malfunctions and methods of their eliminations

Fault	Cause	Action
The unit can not start	No fuel	Fill the oil tank with gasoline
	The Fuel valve is not turned on	Turn the fuel valve to ON
	The Fuel valve is blocked	Clean the fuel bowl (refer to maintain page)
	No engine oil or the engine oil level is low	Add oil
	The engine switch is turned off	Turn the switch to the "on" position
	The spark plug fails	Clean or replace the spark plug (refer to maintain page)
There is no power output	The circuit breaker is in the off position	Turn the circuit breaker to the "on" position
	The plug is poorly contacted	Remove and refit the plug
The unit shudders during operation	The choke lever position is incorrect	Move the choke lever to the "open" position during operation
The unit emits white smoke	The temperature of the engine is too high, maybe overloaded	Let the engine run without load for more than 10 minutes
	The fuel is contaminated	Use fresh clean fuel
The unit emits black smoke	The air filter is dirty	Clean the filter element of the air filter
	The load is too heavy	Reduce load to the rated limit
The unit emits blue smoke	The engine oil is overfilled	Drain oil to correct level
	The engine oil type is incorrect	Choose appropriate engine oil model (refer to maintain page)
The power decreases	The spark plug fails	Clean or replace the spark plug (refer to maintain page)
	The valve clearance are out of adjustment	Adjust the valve clearance (refer to maintain page)

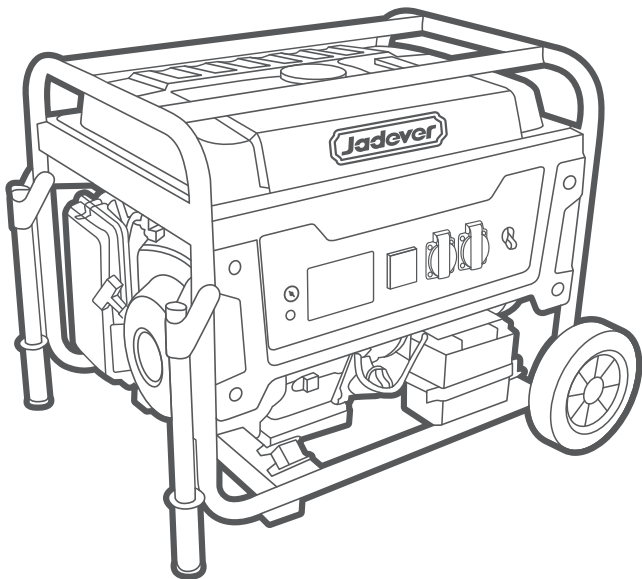
The environmental condition required to operate the generator:

- Suitable temperature: -15°C - 40°C
- Suitable humidity: lower than 95%.
- Suitable altitude: under 1,000 meters (The power load should be reduced where the generator is used at altitudes greater than 1000 meters.)

The generator unit can only be loaded to the rated power under the specified environment conditions. If the environment conditions are inconsistent with the above standards, or if the cooling conditions of the engine and generator unit are poor; for example, when operating in enclosed areas, it is necessary to reduce the power load. It is also necessary to reduce the power load when the temperature, altitude or relative humidity exceed the standards.

If the generator does not work properly in optimal conditions, please take to the nearby dealer or after-sales service center for inspection.

Jadever



   **Jadevermall**
www.jadevermall.com
KEYWAY TECHNOLOGY (NANTONG) CO., LTD
MADE IN CHINA 0324.J02
No. 99, Gugang Road, Chongchuan District,
Nantong City, China