



说明书材质要求：105g铜版纸	说明书成品尺寸：105x143mm
第一：专色+CMYK油墨要求： 1.K色油墨：洒联黑墨	第二：特别注意： 暂无
	 Black（单色印刷）
折叠方式：风琴折 + 对折	备注：

特别注意： 此页内容不印刷

风琴折 + 对折 页面顺序

16P 页面顺序

9	10	11	封面
12	13	14	封底

1	2	3	4
5	6	7	8

20P 页面顺序


11	12	13	14	封面
15	16	17	18	封底

1	2	3	4	5
6	7	8	9	10

更改记录	1. 非自制				
	0224.J01	2024.02.04	YJJ		
	版本号	日期	设计师		

Jadever

GREASE GUN ATTACHMENT

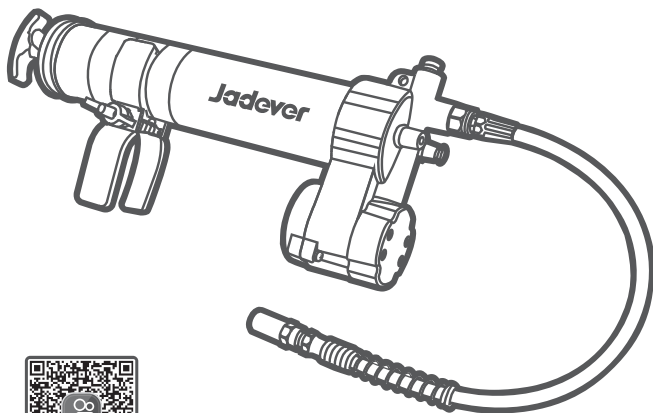

SCAN FOR VIDEO

JDGG5540

**PRODUCT
MANUAL**

GENERAL POWER TOOL SAFETY WARNINGS

⚠ WARNING Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire or serious injury.*

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way.** **Do not use any adapter plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*
- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) **Disconnect the plug from the power source and/or remove the battery**

pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. *Such preventive safety measures reduce the risk of starting the power tool accidentally.*

- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
- f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.**
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*

5) Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- b) **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.**
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.**

- e) **Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*
- f) **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*
- g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

6) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
- b) **Follow instructions for lubricating and changing accessories.**
- c) **Keep handles dry, clean and free from oil and grease.**

THE SYMBOLS IN INSTRUCTION MANUAL

	Read the instruction manual before using.
	CE conformity.
	Safety alert. Please only use the accessories supported by the manufacturer.
	Wear safety glasses, hearing protection and dust mask.
	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

ADDITIONAL SAFETY WARNING

Grease Gun Attachment safety instructions


- Do not operate the Grease Gun Attachment until you have read and understood all safety instructions** contained in the instruction manual for the Grease Gun Attachment and the power tool with which it is to be operated.
- The Grease Gun Attachment is a device capable of producing high pressure and is rated up to 8,000 psi (+/- 500 psi). The typical working load for this attachment is 4,000 psi.** Misuse or misapplication of this attachment can cause component rupture, fire or explosion and can result in serious bodily injury or damage to property.
- Any pressurized system is only as strong as its weakest component. Never exceed the maximum working pressure of the lower rated component in the system.** Check and tighten all connections, fittings and hoses regularly. A worn or damaged hose can rupture, causing serious bodily injury or damage to property.

- d) **Always wear safety glasses or eye shields when operating the Grease Gun Attachment.**
- e) **Always install the Grease Hose securely.** A loose spout is dangerous and can come loose during operation.
- f) **Never place hands or other body parts near the outlet of the Grease Gun Attachment during operation.** Hold the Grease Gun Attachment by its handle only. Do not hold the Grease Hose during operation.
- g) **Release the trigger of the power tool when the grease fitting is full.** Running the power tool continuously can cause the motor to overheat and may cause motor or mechanical damage or personal injury.

INTENDED USE

Grease gun attachment transform almost any electric and cordless drill, impact driver or impact wrench into a grease gun.

SPECIFICATIONS

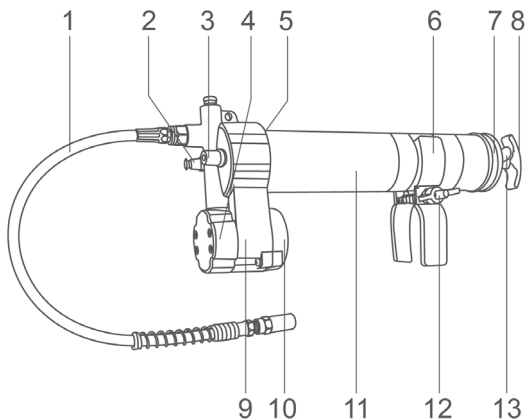

Components

- | | |
|---------------------------------|-------------------------|
| 1. 18" High pressure nylon hose | 8. Plunger handle |
| 2. Air vent valve | 9. Gear housing |
| 3. Filler plug | 10. Jointer |
| 4. Gear cap | 11. Container tube |
| 5. Gun head | 12. Butterfly lock plug |
| 6. Holder | 13. Stopper |
| 7. Bottom cap | |

*(Power tool is not include)

Technical specifications


Model No.	JDGG5540
Grease reservoir capacity	14oz cartridge/400cc bulk
Recommended working pressure	4000psi
Max. rated pressure	8000psi
Flow rate	5oz/min (140g/min)
Material	Steel tube + Aluminum-Cast
Drive shank	1/4" Hex
Loading methods	Grease, Cartridge, Bulk, Bulk Dispenser

- Due to our continuing program of research and development, the specifications herein are subject to change without notice.

Accessories


- Greaser body 1pcs
- High pressure nylon hose 1pcs
- Tool holder 1pcs

*Power tool is not include

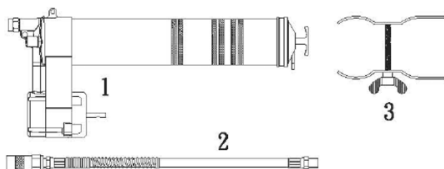


OPERATION PICTURE

A

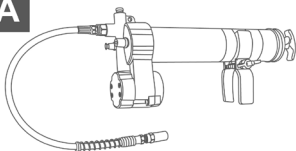


Universal Power Coupling-greaser

B

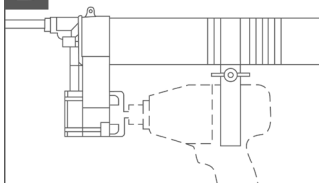


C

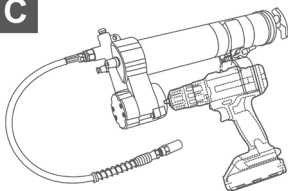

D


Power Drive Drill

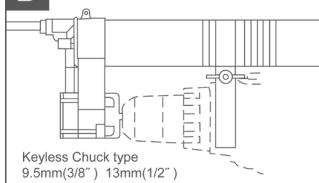

Keyless Chuck type
9.5mm(3/8") 13mm(1/2")

E


Power Screw Driver

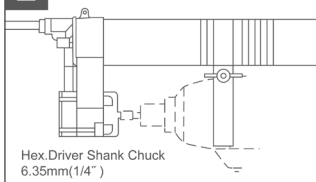

Hex.Driver Shank Chuck
6.35mm(1/4")

F


Power Impact Wrench

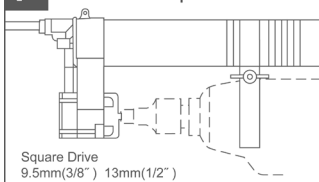

Square Drive
9.5mm(3/8") 13mm(1/2")

G


AC Power Drive Drill

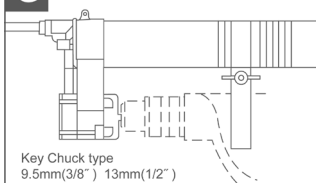


Key Chuck type
9.5mm(3/8") 13mm(1/2")

H

AIR Power Drive Drill

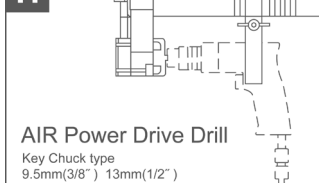

Key Chuck type
9.5mm(3/8") 13mm(1/2")

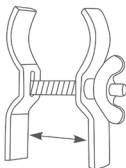OPERATION PICTURE**I**

Holder

Available inner width of tolerance for
power tool is 1.5" to 3"

FUNCTION DESCRIPTION

CAUTION!

Always ensure that the tool is switched off and unplugged or the battery pack is removed from the tool before adjusting or checking the function of the tool.

NOTE:

- a) The information contained in this Instruction Manual is designed to assist you in the safe operation and maintenance of the power tool.
- b) Never operate or attempt any maintenance on the tool unless you have first read and understand all safety instructions contained in your power tool manual.
- c) Some illustrations in this Instruction Manual may show details or attachments that differ from those on your own power tool.

Assembly Instructions

1. Unscrew the Grease Container Tube from the Gear Housing.
2. Insert the drive shank into the chuck of the drill. The end of the drive shank should be positioned approximately 1/4" (6.35 mm) away from the bottom of the chuck.
3. Retract the Plunger to its full extent.
4. After removing the plastic cap from the grease cartridge, insert it into the Grease Container Tube with the open end towards the Plunger. The lip of the grease cartridge should be furthest away from the Plunger. If loading via bulk or bulk dispenser methods, refer to "Alternate Loading Instructions".
5. Peel away the exposed metal cover and screw the Grease Container Tube tightly onto the Gear Housing
6. Loosen the Locking Thumb Screw on the Tool Holder until the proper clearance has been attained based on the width of your drill.
7. Place the Tool Holder onto the Grease Container Tube and drill until it is properly positioned. When it is in the proper position, tighten the Locking Thumb Screw securely.
8. Assemble the Grease Hose onto the Gear Housing and ensure that the Grease Hose Cap is secured to prevent grease leakage.
9. Depress the Plunger Release and push the Plunger Handle forward.

Alternate Loading Instructions (Bulk & Bulk Dispenser)

Bulk loading

1. Unscrew the Grease Container Tube from the Gear Housing.
2. Retract the Plunger to its full extent.
3. Using a scoop, spoon, etc., fill the empty Grease Container Tube with bulk grease.
4. Screw the Grease Container Tube tightly onto the Gear Housing.
5. Loosen the Locking Thumb Screw on the Tool Holder until the proper clearance has been attained based on the width of your drill.
6. Place the Tool Holder onto the Grease Container Tube and drill until it is properly positioned. When it is in the proper position, tighten the Locking Thumb Screw securely.
7. Assemble the Grease Hose onto the Gear Housing and ensure that the Grease Hose Cap is secured to prevent grease leakage.
8. Depress the Plunger Release and push the Plunger Handle forward.

Bulk dispenser

1. Loosen the Locking Thumb Screw on the Tool Holder until the proper clearance has been attained based on the width of your drill.
2. Place the Tool Holder onto the Grease Container Tube and drill until it is properly positioned. When it is in the proper position, tighten the Locking Thumb Screw securely.
3. Assemble the Grease Hose onto the Gear Housing and ensure that the Grease Hose Cap is secured to prevent grease leakage.
4. Remove the Bulk Filler Plug located at the front of the Gear Housing. Insert the Bulk Dispenser Fitting into the Bulk Filler and fill the Grease Container Tube to capacity. When the Grease Container Tube has been filled to capacity, secure the Bulk Filler Plug onto the Grease Housing.
5. Depress the Plunger Release and push the Plunger Handle forward.

Priming Instructions

1. Air pockets inside the Grease Container Tube can cause the Grease Gun Attachment to lose its prime.
2. Unscrew Grease Container Tube 1-2 turns.
3. Retract the Plunger to its full extent, depress the Plunger Release and push

the Plunger Handle forwards. Repeat several times. This will cause the Rubber Plunger to expel the air pockets from the Grease Container Tube.

4. Tighten the Grease Container Tube to secure it to the Gear Housing.

OPERATION

CAUTION!

The Grease Gun Attachment should only be operated in **FORWARD** mode.

CAUTION!

The Grease Gun Attachment should never be used in **HAMMER** mode. Operate only in **Drill, Driver or Impact** modes.

1. Follow the Assembly and Priming Instructions listed above.
2. Press the Air Vent Valve 3-4 times in order to remove any air that may be trapped inside.
3. Remove the hose cap and insert the spout of the grease hose onto the fitting to be greased.
4. Depress the trigger to begin operation.
5. The revving sounds of the motor approximately indicate the number of grease "pumps" that have been released into the fitting.
6. When the fitting has been adequately greased, release the trigger and affix the hose cap to the end of the hose.

Unloading Instructions

1. To unload a grease cartridge, unscrew the Grease Container Tube from the Gear Housing.
2. Retract the Plunger Handle to its full extent.
3. Depress the Plunger Release and slowly allow the Plunger to move forwards. This will push the empty grease cartridge out of the Grease Container Tube. Repeat as necessary.


Maintenance

1. Use a soft, dry cloth to remove all dirt, grease, and dirt from the exterior of the Grease Gun. Do not use solvents to clean the Grease Gun.
2. Keep the Grease Gun and its accessories in a clean, dry location and out of children reach

MAINTENANCE&MALFUNCTIONS

Troubleshooting

Problem	Possible Cause	Remedies
Grease is not expelled from the Grease Hose (Tool is running OK)	There is an air pocket inside the Grease Container Tube.	Follow the Priming Instructions to ensure that all air has been expelled from the Grease Container Tube.
The Plunger cannot enter the Grease Cartridge	- The Grease Cartridge is not of the applicable size. - The end of the Grease Cartridge is damaged.	- Check to ensure that the size of the Grease Cartridge conforms to the specifications of the Grease Gun Attachment. - Apply grease to the Plunger and the end of the Grease Container Tube to help the Plunger to easily enter the tube. - Ensure that the ends of the Grease Cartridge are not damaged or folded and remain in a rounded shape. - Remove used Grease Cartridges from the Grease Container Tube when loading bulk grease
Grease is leaking from the Grease Container Tube	The Grease Container Tube is not properly secured.	- Tighten the Grease Container Tube to the Gear Housing using a wrench to ensure that it is properly secured. - Check other parts, e.g., Grease Hose to ensure that they are properly secured.

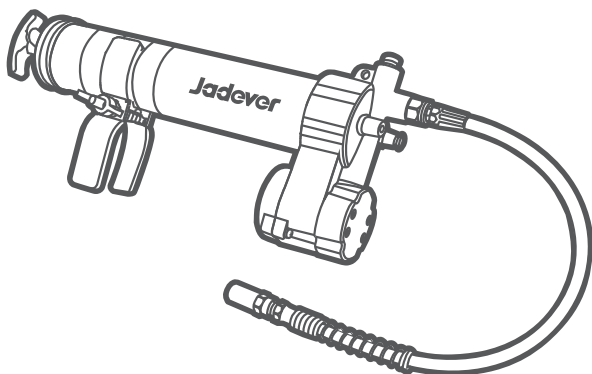

   **Jadevermall**
www.jadevermall.com
KEYWAY TECHNOLOGY (NANTONG) CO.,LTD
MADE IN CHINA 0224.J01