





说明书材质要求: 105g 有光铜版纸	说明书成品尺寸: 105x143mm
第一: 专色+CMYK油墨要求: 1. TOTAL专色油墨, 见实物色样调整 2. C色油墨: 泗联天蓝墨 3. M色油墨: 泗联洋红墨 4. Y色油墨: 泗联中黄墨 5. K色油墨: 泗联黑墨	第二: 特别注意: 1. 印刷时看样颜色请参考我司提供的实物样品颜色, 不得偏色。 2. 322C的专色不得参考C=100, M=28, 42, Y=48, 29, K=21, 6对应的四色色谱颜色来看样印刷  Black (单色印刷)
折叠方式: 风琴折 特殊情况: 16P/20P: 风琴折 + 对折	备注:

售后二维码粘贴注意事项:

按照标注的标贴尺寸制作二维码, 不允许盖住边框, 标贴位置必须在正中间。

边框印刷尺寸16x15mm

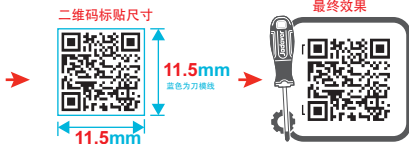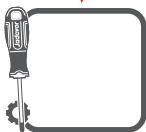

特别注意: 此页内容不印刷

风琴折 + 对折 页面顺序

16P 页面顺序

9	10	11	封面
12	13	14	封底
1	2	3	4
5	6	7	8


20P 页面顺序

11	12	13	14	封面
15	16	17	18	封底
1	2	3	4	5
6	7	8	9	10

更改记录	1. 完全参考WAX1505				
	0723.J01	2023.7.17	ZRR		
	版本号	日期	设计师		

Jadever

5PCS/SET **5 PCS AIR
TOOLS SET**

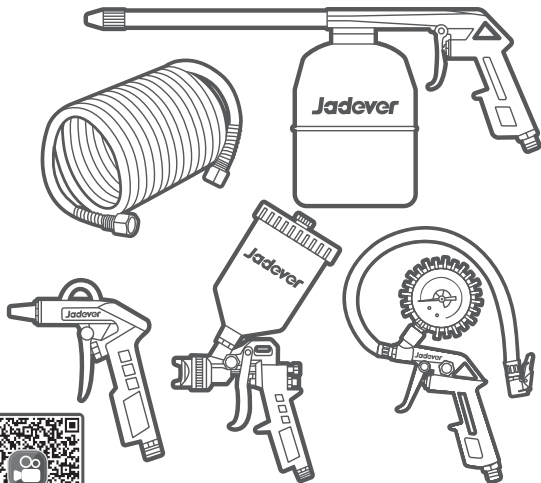


SCAN FOR VIDEO

JDAX1505

**PRODUCT
MANUAL**

GENERAL SAFETY WARNINGS

Important safety instructions

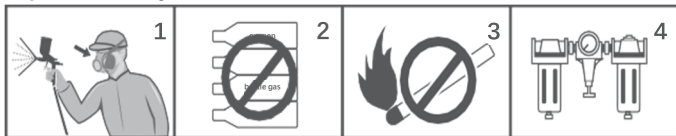



1. For toxic vapors produced by spraying certain materials can create intoxication and serious damage to health. Always wear safety glasses, gloves and respirator to prevent the toxic vapor hazard, solvent and pointing paint coming into contact your eyes or skin. (see Figure 1).
2. Never use oxygen, combustible or any other bottle gas as a power source or would cause explosion and serious personal injury. (see Figure 2).
3. Fluid and solvent can be highly flammable or combustible. Please use the tool only in well-ventilated area, and avoid any ignition sources, such as smoking, open flames and decrial hazard. (see Figure 3).
4. Disconnect tool from air supply hose before doing tool maintenance and during non-operation, for emerge stop and prevention of unintended operation, a ball valve near the gun to air supply is recommend.
5. Use clean, dry and regulate compressed air rated at 3.0-4.0bar, never exceed maximum permissive operating pressure 8.3bar (120psi) (see Figure 4).
6. Never use homogenate hydrocarbon solvent, which can chemically react with aluminum and zinc parts and chemically compatible with Alum. and zinc pats.
7. Never point gun at you and others at any time.
8. Before operating the tool, make sure all the screws & caps are securely tightened in case of leaking;
9. Before painting, make inspection for free movement of trigger and nozzle to insure tool can operate well.
10. Never modify this tool for any other applications. Only use parts, nozzles and accessories recommended by manufactures.

SPECIFICATIONS

Technical specifications

Item name	Air spray gun
Air Inlet	1/4"
Type of Feed	Gravity
Standard Dia of Nozzle	1.5mm
Max. pressure of air	3-4bar (43.5-58psi)
Paint Capacity	600cc
Avg. Air Consumption	119-200L/min (4.2-7cfm)
Pattern Width	180-250mm
Item name	Air washing gun
Air Inlet	1/4"
Type of Feed	Suction
Max. pressure of air	3-4bar (43.5-58psi)
Paint Capacity	750cc
Avg. Air Consumption	113-340L/min (4-12cfm)
Item name	Air tire inflating gun
Air Inlet	1/4"
Max. pressure of air	12bar (174psi)
Item name	Air blow gun
Air Inlet	1/4"
Lenght of Nozzle	16mm
Max. pressure of air	2-6bar (29-87psi)
Avg. Air Consumption	100-198L/min (3.5-7cfm)
Item name	Air hose
Max. pressure of air	8bar (116psi)

OPERATION PICTURE

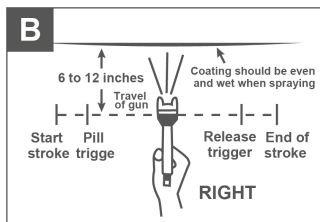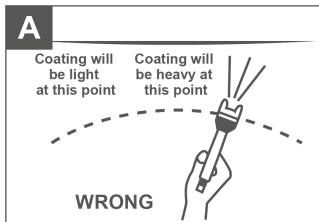

OPERATION

Instructions for operation

Preparation

1. After unpacking the product, inspect carefully for any damage that may have occurred during transit. Make sure to tighten fittings, bolts, etc., before putting unit into service.
2. Thoroughly mix and thin paint in accordance with the paint manufacturer's instructions. Most materials will spray readily if thinned properly.
3. Strain material through filter, cheese cloth or a paint strainer.
4. Fill the canister about 3/4 full and start the air compressor.

⚠Warning: do not exceed maximum pressure of spray gun or any other parts in the compressor system.

5. After Connect the gun to air supply, please make sure that the fluid cap, container and air hose have been connected tightly with spray gun.
6. Set up a piece of cardboard or other scrap material to use as a target and adjust for best spray pattern.

⚠Warning: never aim or spray at yourself or anybody else which would cause serious injury.

7. Test the consistency of the material by making a few strokes on a cardboard target. If material still appears too thick, add a small amount of thinner.

Thing with care!

Do not exceed paint manufacturer's thinning recommendations.

Operation

1. Begin spraying. Always keep the gun at right angles to the work.
2. Keep the nozzle about 6 to 12 inches from the work surface. Grip the gun keeping perpendicular with spraying area then move it parallel for several times, stopping gun movement in mid-stroke will cause a buildup of paint and result in runs. Do not fan the gun from side to side while painting. This will cause a build-up of paint in the center of the stroke and an insufficient coating at each end.
3. Trigger the gun properly. Start the gun moving at the beginning of the stroke before squeezing the trigger and release the trigger before stopping gun movement at the end of the stroke. This procedure will blend each stroke with the next without showing overlap or unevenness.
4. The amount of paint being applied can be varied by the speed of the stroke, distance from the surface and adjustment of the fluid control knob.
5. Overlap strokes just enough to obtain an even coat. NOTE: Two thin coats of paint will yield better results and have less chance of runs than one heavy layer.
6. Use a piece of cardboard as a shield to catch overspray at the edges of the work to protect other surfaces.

MAINTENANCE


Incomplete cleaning could cause function failures and a degradation of the fan form.

1. Remove any remaining paint by pouring it into another container.
2. Disassemble the spray gun making sure to remove the needle before disassembling the nozzle to avoid damage to the housing of the nozzle closure.
3. Clean all the paint passages and the nozzle. Clean the other components using a brush soaked in solvent.
4. Reassemble the spray gun and spray a small quantity of solvent to eliminate all the residues in the paint passages.
5. After the product is broken, it should be sent to a special recycling agency, not discarded at will.

 Warning: never use metal or other objects that could damage the holes in the nozzle and cap. never immerse the spray gun completely in solvent. never use components or parts that are not manufacturer originals.

Storing

1. When not using spray gun, turn the fluid adjustment knob counter-clockwise to open which will reduce spring tension on needle fluid tip.
2. Spray gun MUST BE well cleaned and lightly lubricated.

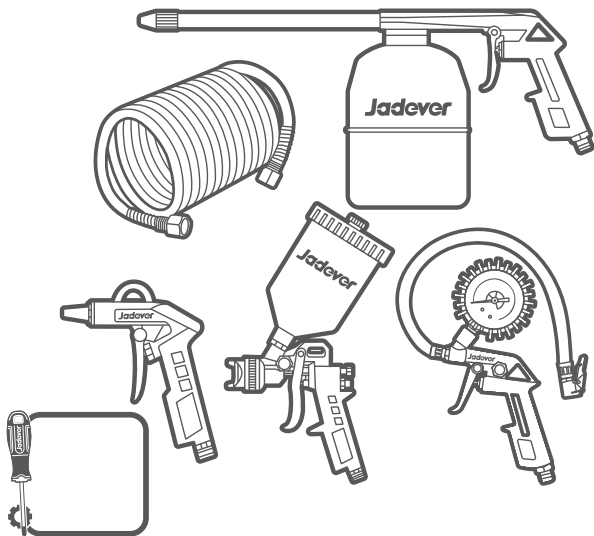

PAP

   Jadevermall
www.jadevermall.com

KEYWAY TECHNOLOGY (NANTONG) CO.,LTD
MADE IN CHINA 0723.J01

No. 99, Gugang Road, Chongchuan District,
Nantong City, China