



说明书材质要求： 105g 有光铜版纸	说明书成品尺寸： 105*143mm
Black（单色印刷）	
折叠方式： 风琴折 （ 20P 以下用风琴折 ）/ 骑马钉 （ 20P 以上用骑马钉 ） 特殊情况：16P/20P：风琴折 + 对折	备注：
特别注意：此页内容不印刷	

风琴折 + 对折 页面顺序 16P 页面顺序 <table><tr><td>9</td><td>10</td><td>11</td><td>封面</td></tr><tr><td>12</td><td>13</td><td>14</td><td>封底</td></tr></table> <table><tr><td>1</td><td>2</td><td>3</td><td>4</td></tr><tr><td>5</td><td>6</td><td>7</td><td>8</td></tr></table>	9	10	11	封面	12	13	14	封底	1	2	3	4	5	6	7	8	20P 页面顺序 <table><tr><td>11</td><td>12</td><td>13</td><td>14</td><td>封面</td></tr><tr><td>15</td><td>16</td><td>17</td><td>18</td><td>封底</td></tr></table> <table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td></tr><tr><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr></table>	11	12	13	14	封面	15	16	17	18	封底	1	2	3	4	5	6	7	8	9	10
9	10	11	封面																																		
12	13	14	封底																																		
1	2	3	4																																		
5	6	7	8																																		
11	12	13	14	封面																																	
15	16	17	18	封底																																	
1	2	3	4	5																																	
6	7	8	9	10																																	


更改记录	1. 新制作			1. 更新欧盟标准EN 166:2001 为EN ISO 16321-1:2022		
	0125.V01	2025.1.8	Ligeia	0425.V01	2025.4.15	Ligeia
	版本号	日期	设计师	版本号	日期	设计师

ingco

www.ingco.com

**PRODUCT
MANUAL**

SAFETY GOGGLES

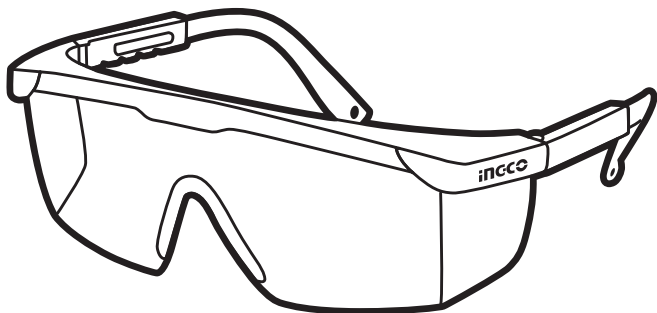

HSG04



GENERAL SAFETY WARNINGS

 WARNING! This eye- protection is not designed to provide unlimited protection to the eyes. Please read these instructions carefully before using for the safety's sake.

Warning which are caused at the risk analysis

- a) Failure to comply with the indicated mechanical strength (insufficient protection) - always check that your given the proper protection, in uncertainty check with the health and safety representative.
- b) Exceeding the service life (insufficient protection) - check the eye-protector before each use, for damage and life-time.
- c) Using an eye-protector without filtering action against optical radiation (damage to the eyes) - check before each use, that the eye-protector has the necessary scale number, in case of uncertainty check with the health and safety representative, otherwise the protection cannot be guaranteed.
- d) Using the product against splashes (insufficient protection) - always check that your given the proper protection, in uncertainty check with the health and safety representative
- e) Using the product against large dust particles (injury, accident) - the eye protection device must only be used for the work described in the instructions for use. Any deviation from the instructions may cause injury or accidents.
- f) Use of damaged products (insufficient protection) - check the eye-protector before each use, for damage and life-time.
- g) Improper use of the eye-protector (injury, accident) - the eye protection device must only be used for the work described in the instructions for use. Any deviation from the instructions may cause injury or accidents.

The user shall contact the health and safety representative to ensure he is given the proper protection by the personal eyewear during working conditions

Criterion

Our safety spectacles satisfy the requirements of European Directive 2001/95/EC and the harmonized standard EN ISO 16321-12022, and comply with the requirements of (EU) Regulation 2016/425. EU-type examination certificates have been issued by: DIN CERTCO

Gesellschaft für Konformitätsbewertung mbH, Alboinstraße 56, 12103 Berlin, Germany; Notified Body: 0196

Normalization

The significance of the marking on the frame and the ocular:

Marking on the frame: SL 166 F CE, (SL=manufacturer code, 166=number of the testing standard, F=protection against high-speed particles (45 m/s), CE=Certification mark)

Marking on the ocular

SL 1 F CE, (SL=manufacturer code, 1=optical class, F=protection against high-speed particles (45 m/s), CE=Certification mark)

A note to instruct that if protection against high-speed particles at extremes of temperature is required, then the selected eye-protector should be marked with the letter T immediately after the impact letter, i.e., FT, BT or AT. If the impact letter is not followed by the letter T then the eye protector shall only be used against high speed particles at room temperature.

Declaration of the materials

The material of the eye-protection, which is directly in contact with skin, will not do any harm to the skin. But to those who are easily allergic, there might be allergic reactions.

INTENDED USE

The eye-protection can protect the eyes from the danger of mechanical collision caused by high-speed particles.

Please inspect the spectacles frequently. If the structure of the lenses are damaged or the surface is scratched, replace the product immediately, the duration depends on factors such as use, cleaning, storage and maintenance.

OPERATION

Instructions for use

The eye-protection can protect the eyes from the danger of mechanical collision caused by small flying particles. Please leave the workplace immediately if you feel dizzy or allergic caused the damage of the eye-protection.

No spare parts available

We recommend a use of the spectacle for a period of 1 year. The duration of use depends on various factors such as use, cleaning storage and maintenance. Frequently inspections and replacement if it is damaged are recommended.

If the symbol F is not common to both the ocular and the frame, then it is the lower level which shall be assigned to the complete eye-protector.

A warning that eye-protectors against high-speed particles worn over standard ophthalmic spectacles may transmit impacts, thus creating a hazard to the wearer.

MAINTENANCE AND CLEANING


Maintenance

When you don't use the eye-protection, we suggest you put it into a clean bag or a clean and dry glasses box.

Cleaning and disinfection

A better way to maintain the eye-protection

1. Don't use abrasive materials. Using warm suds and soft cloth to wash and clean.
2. Use alcohol to disinfect the eye-protection parts which are directly in contact with the skin.

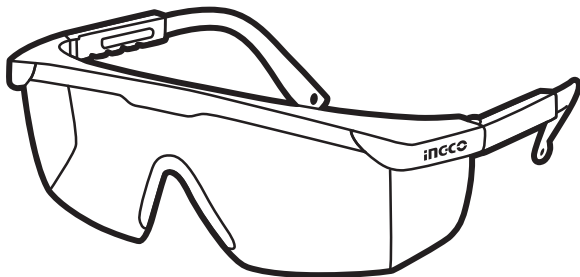

MADE IN CHINA 0425.V02

NEWWAY TECHNOLOGY (SUZHOU) CO., LIMITED
No. 20 Dagang Road, Fuqiao Town, Taicang City, China

f y i INGCO Global www.ingco.com